

The wheelchair will last longer if it is regularly maintained. If users are unable to maintain the wheelchair themselves it should be taken to a mechanic or the service centre which provided the wheelchair.

#### **General reminders**

- §Never position the wheelchair near fire
- § Be careful when smoking in or near the wheelchair
- § Do not shower, enter the sea or river in the wheelchair
- § Do not leave the product outside during heavy rain or saturate during cleaning
- §Following contact with salt water the product should first be cleaned with fresh water and then fully dried
- § Keeping the wheelchair clean will increase the life of the wheelchair
- § If the paint on the frame becomes scratched, paint the affected area immediately to ensure that it does not corrode
- § Check nuts and bolts at least once a month



### motivation

## rough terrain and active folding wheelchairs

# care and maintenance guide

Contact:

motivation project engineer products@motivation.org.uk info@motivation.org.uk www.motivation.org.uk Unit 2 Sheene Road Bedminster, Bristol BS3 4EG Tel: + 44 (0) 117 9 660 398 info@motivation.org.uk www.motivation.org.uk

### care and maintenance instructions



#### **Transporting Wheelchair**

- Remove the cushion
- Remove the armrests
- Press down on the locking strip to fold down the backrest
- Undo the wheel lock bolts
- Remove the wheels
- Don't pick wheelchair up by the armrests

cushion and upholstery

- Check condition at least once a month
- Look for ripped fabric or seams and worn out foam
- Return wheelchair to service centre if user has problems or concerns with their cushion
- Keep the cover upholstery tight at all times
- Wash cushion cover whenever it is un-clean, or comes in contact with urine
- Dry the cushion fully before re-fitting to the wheelchair
- Never expose the cushion to direct sunlight, even when drying

#### armrests

• Demonstrate how to remove and correctly fit the armrests

#### wheels

- If wheels do not run smoothly, the bearings may need changing
- Check tyres are hard, at least once a month
- Fix any punctures immediately
- Check spokes are tight, at least once a month

#### rear wheel quick-release

• Check the rear wheel lock bolts are secure, at least once a month

#### brakes

• Never put hand on the brakes during transfers

#### footrest

- Never put hand on the footrest during transfers
- Never stand or carry loads on the footrest
- Check toe-straps regularly for damage and do
  not leave them to hang down below footrest

#### castor wheel

• If it does not run smoothly, the bearings may need changing



#### **Transporting Wheelchair**

- Remove the cushion
- Flip-up the footrests
- Pull seat upwards to fold sideframes together
- Don't pick wheelchair up by the armrests