





MOTI GO SUPPORTIVE SEATING SYSTEM - SIZE L

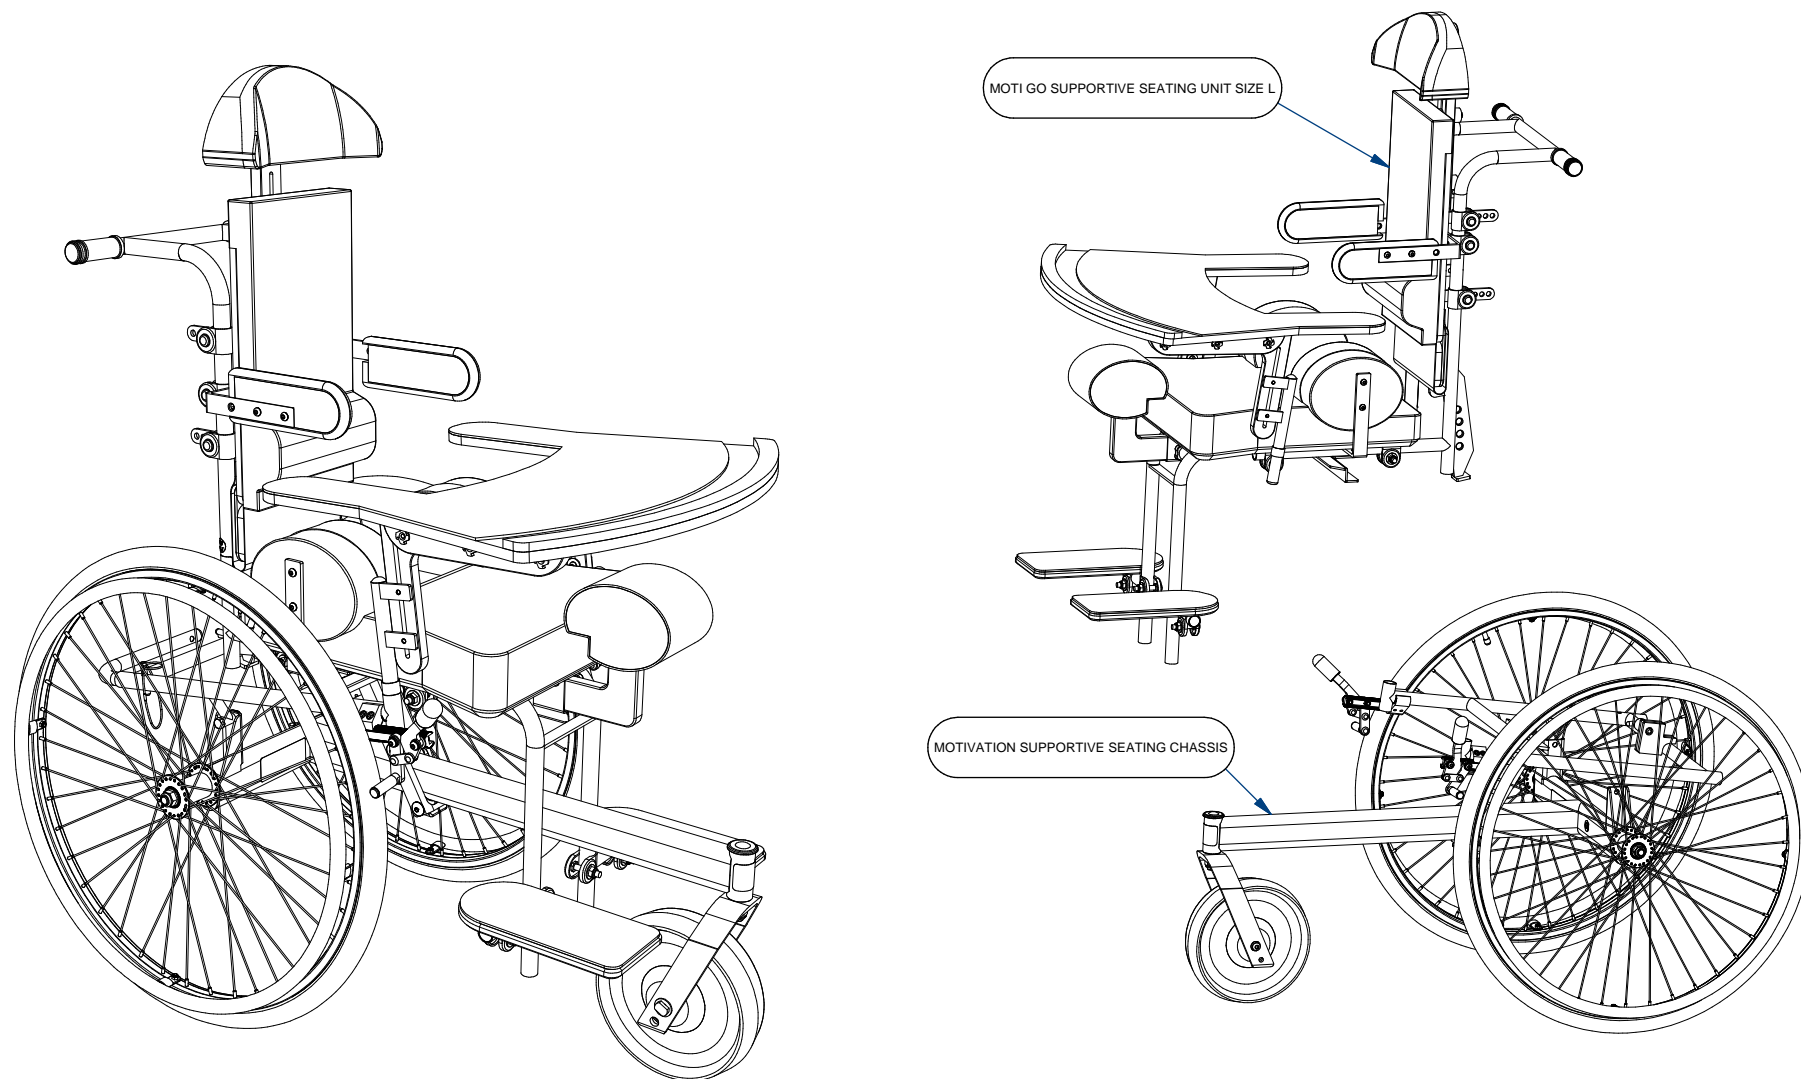


02822	WMSS-01 SEAT CUSHION ASSEMBLY G3
02827	WMSS-01 BACKREST FOAM ASSEMBLY G3
02856	G1-G2-G3 ABDUCTOR ASSEMBLY
03117	G2-G3 HEADREST PRE-ASSEMBLY
03121	G3 HIP PAD UNIT LEFT
03156	WMSSG3-01 SEATING UNIT FRAME ASSEMBLY
03157	WMSS-01 FOOTREST STAND ASSEMBLY G2/3
03182	G2-G3 LTS PAD UNIT
03194	WMSS-01 G2/G3 STRAPS WITH FASTENERS
02345	G3 TRAY FINAL ASSEMBLY



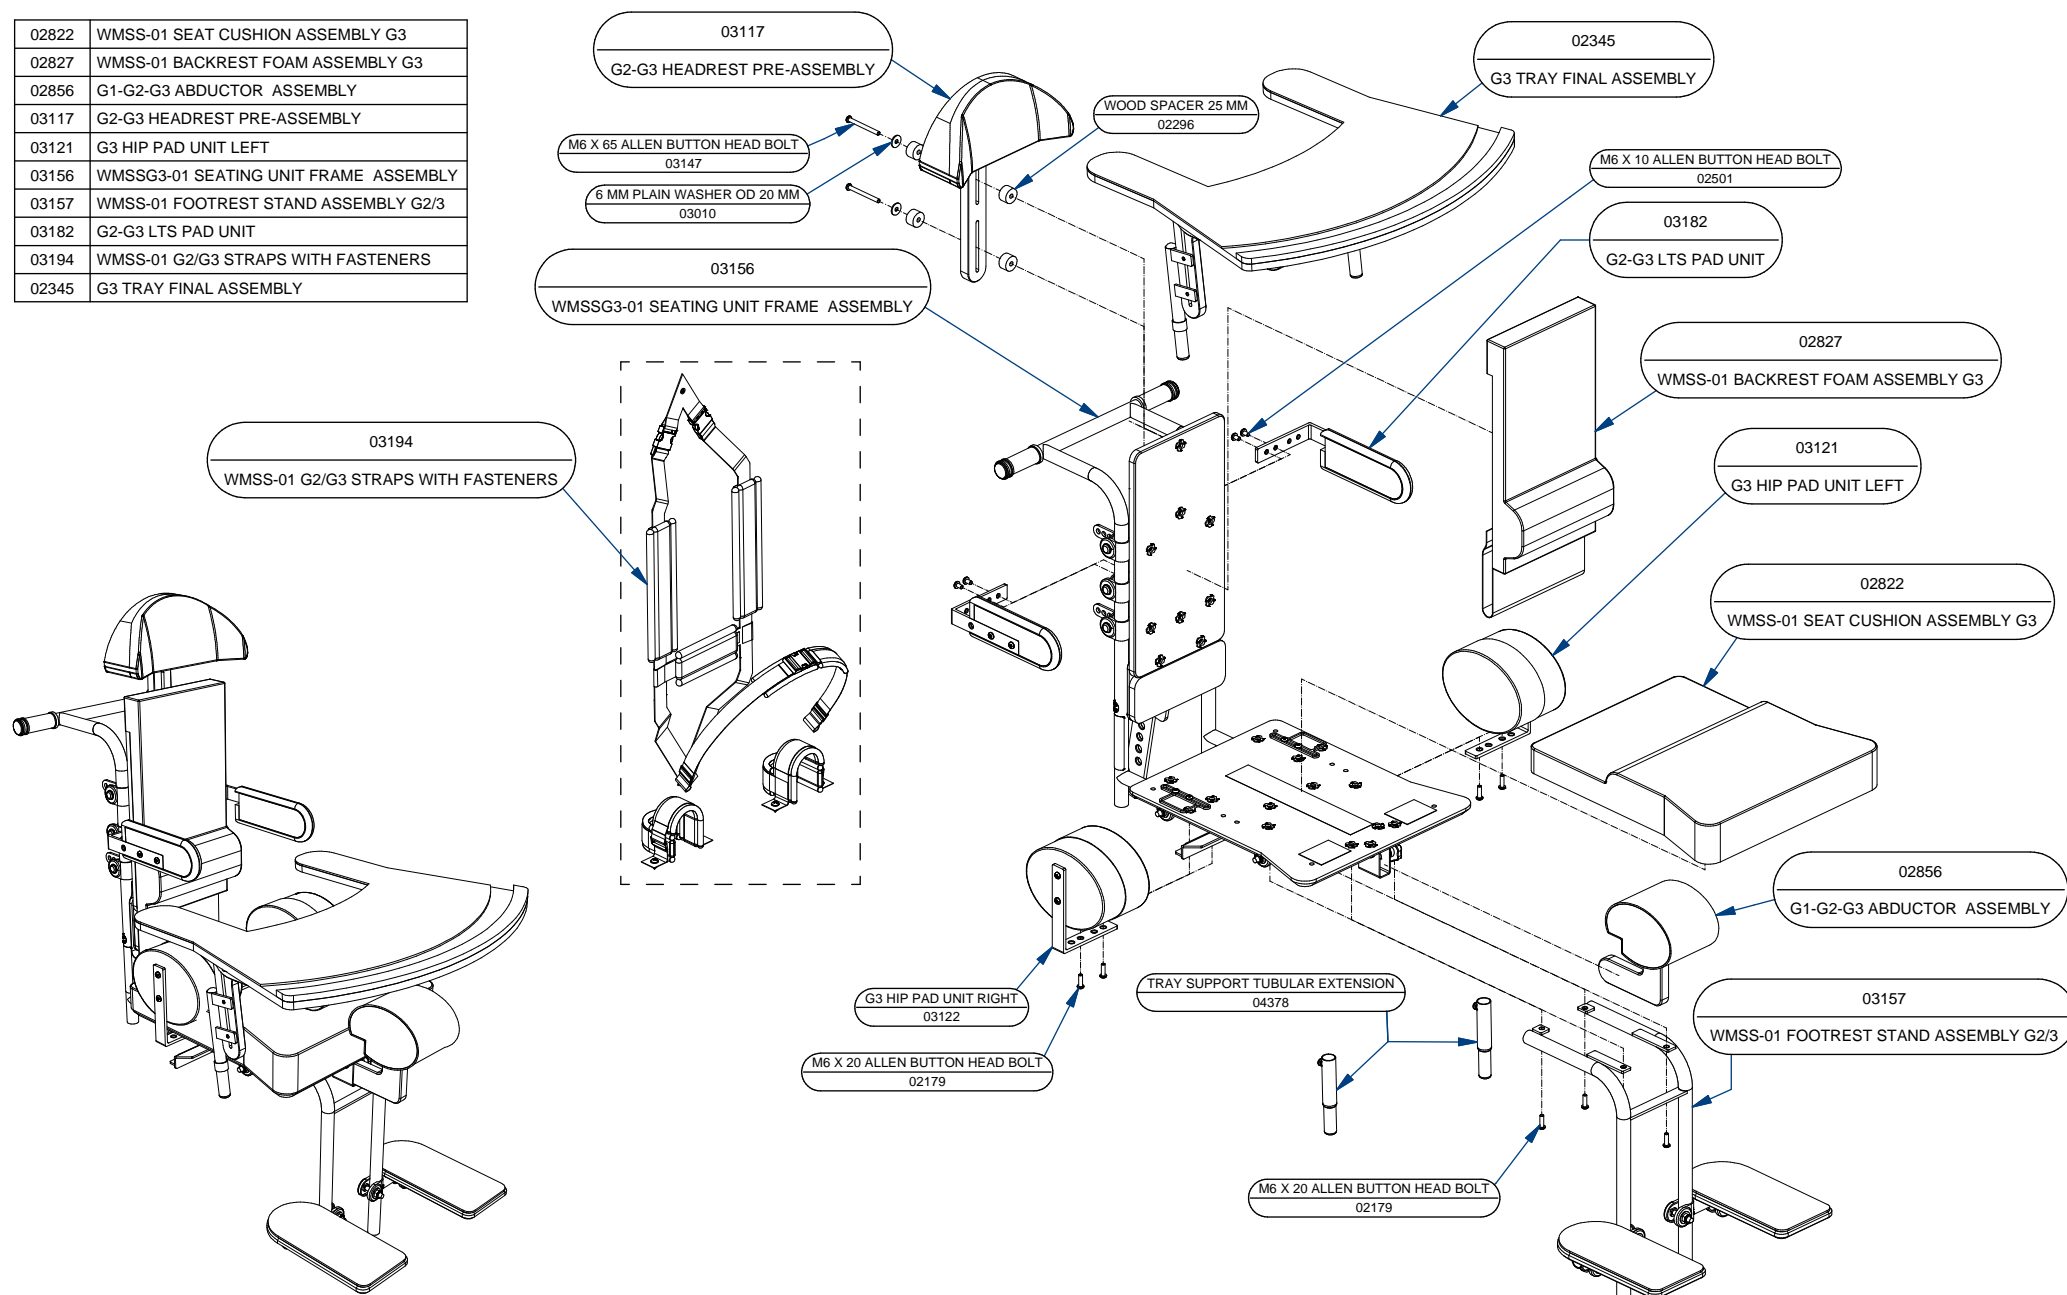


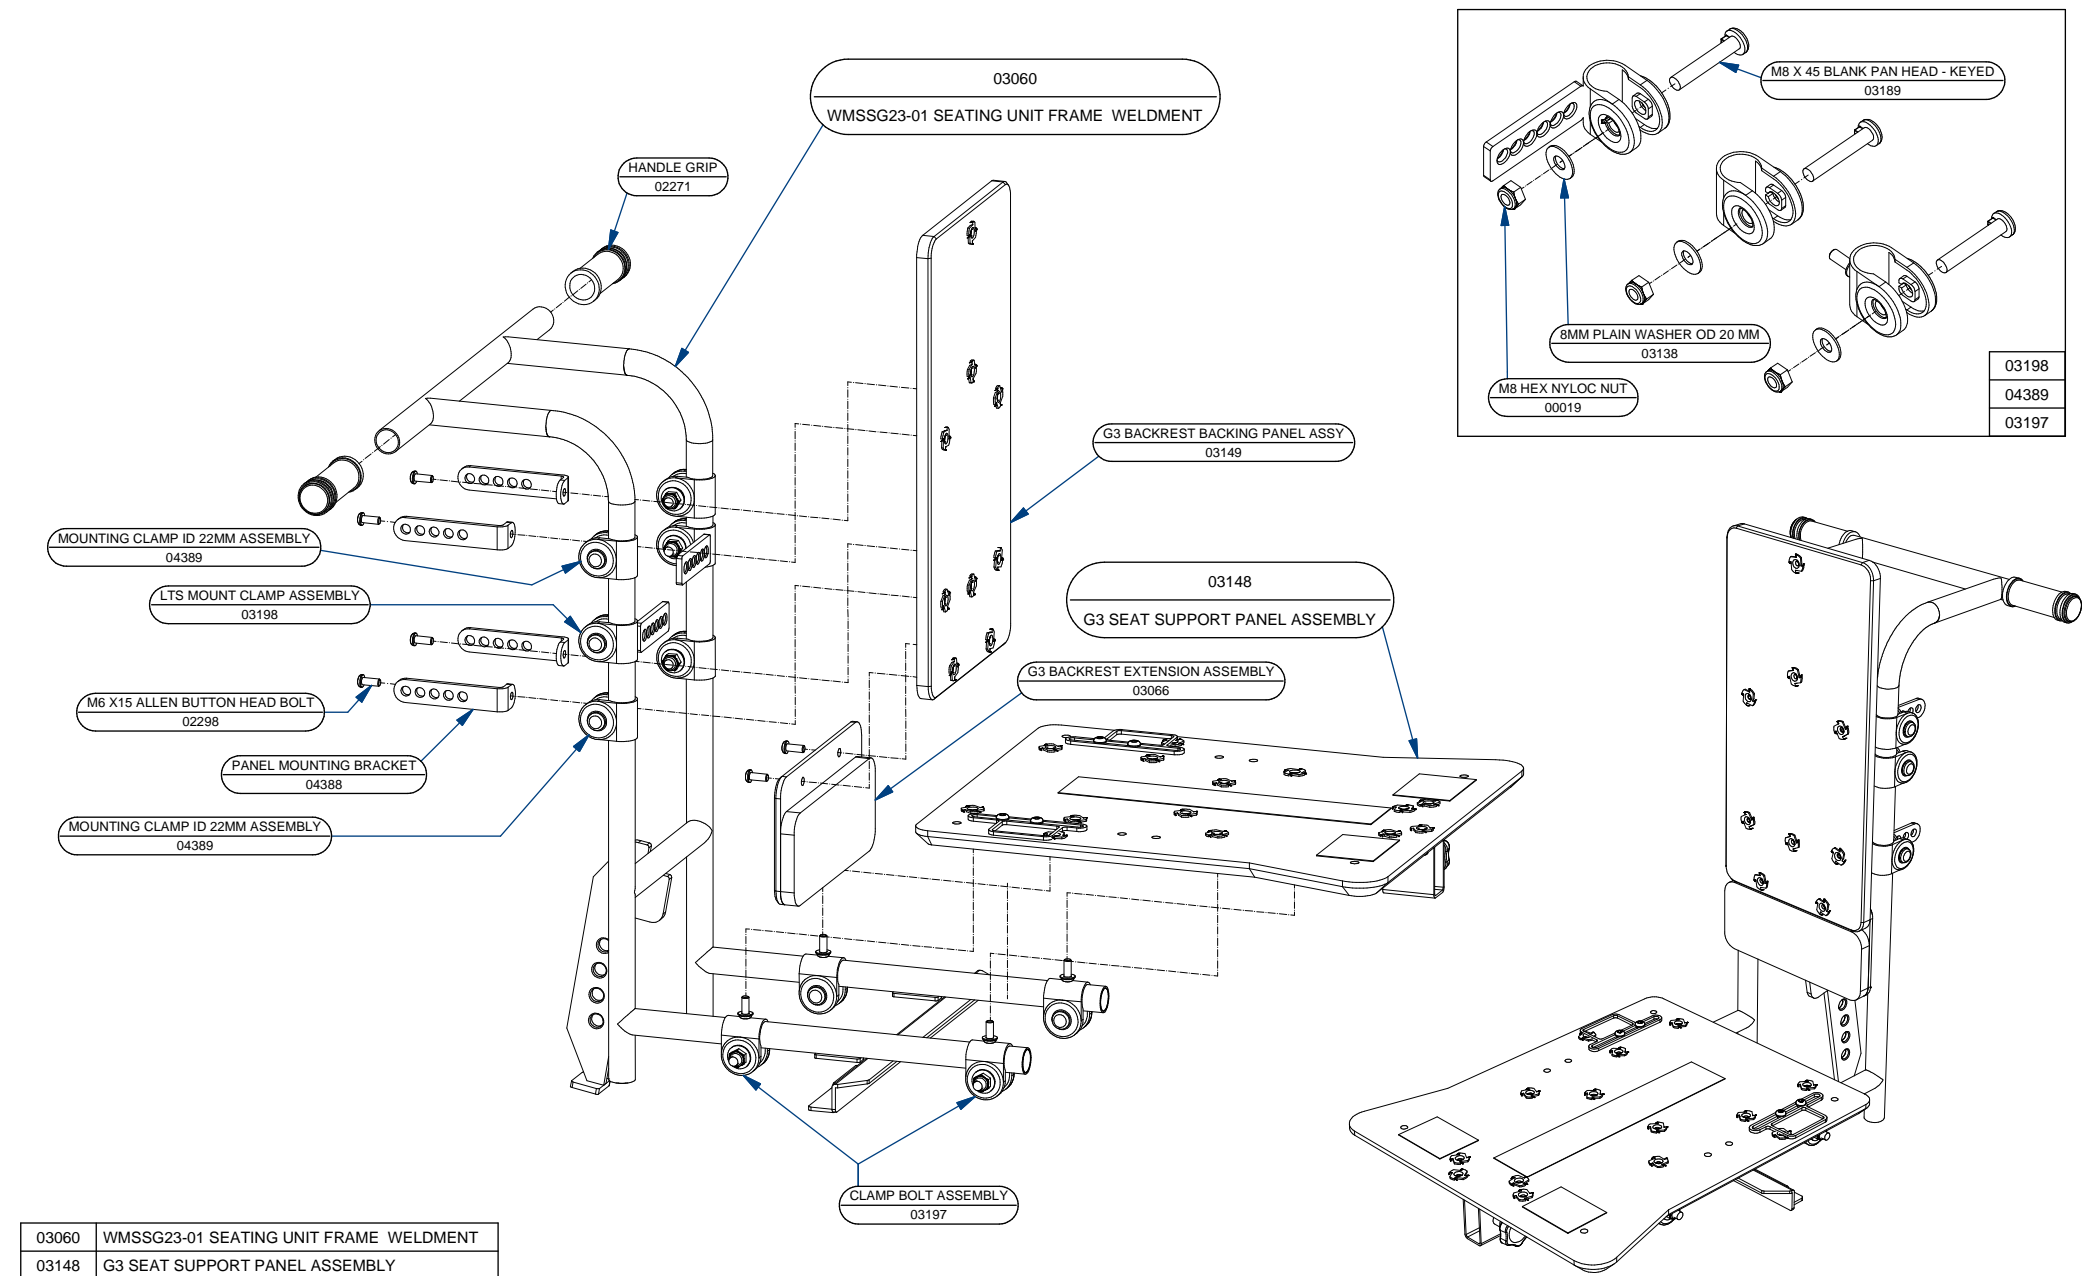


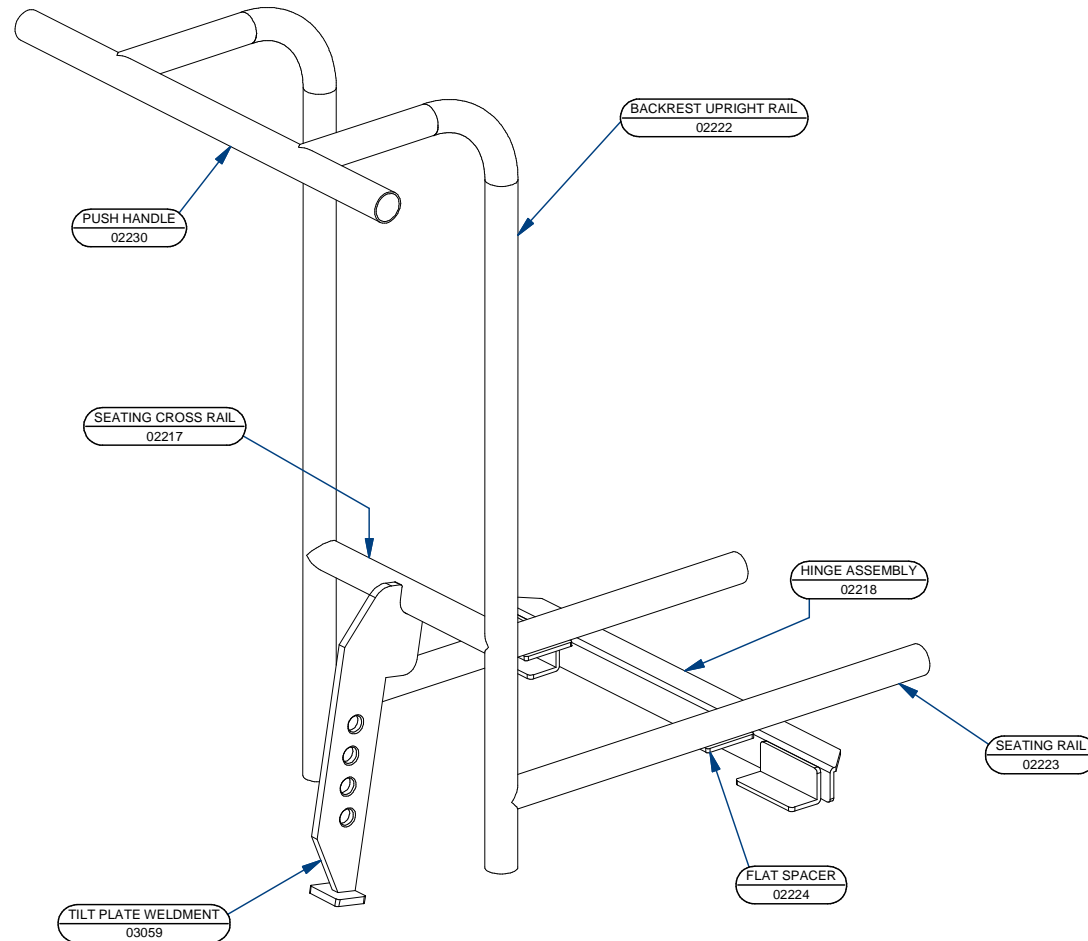


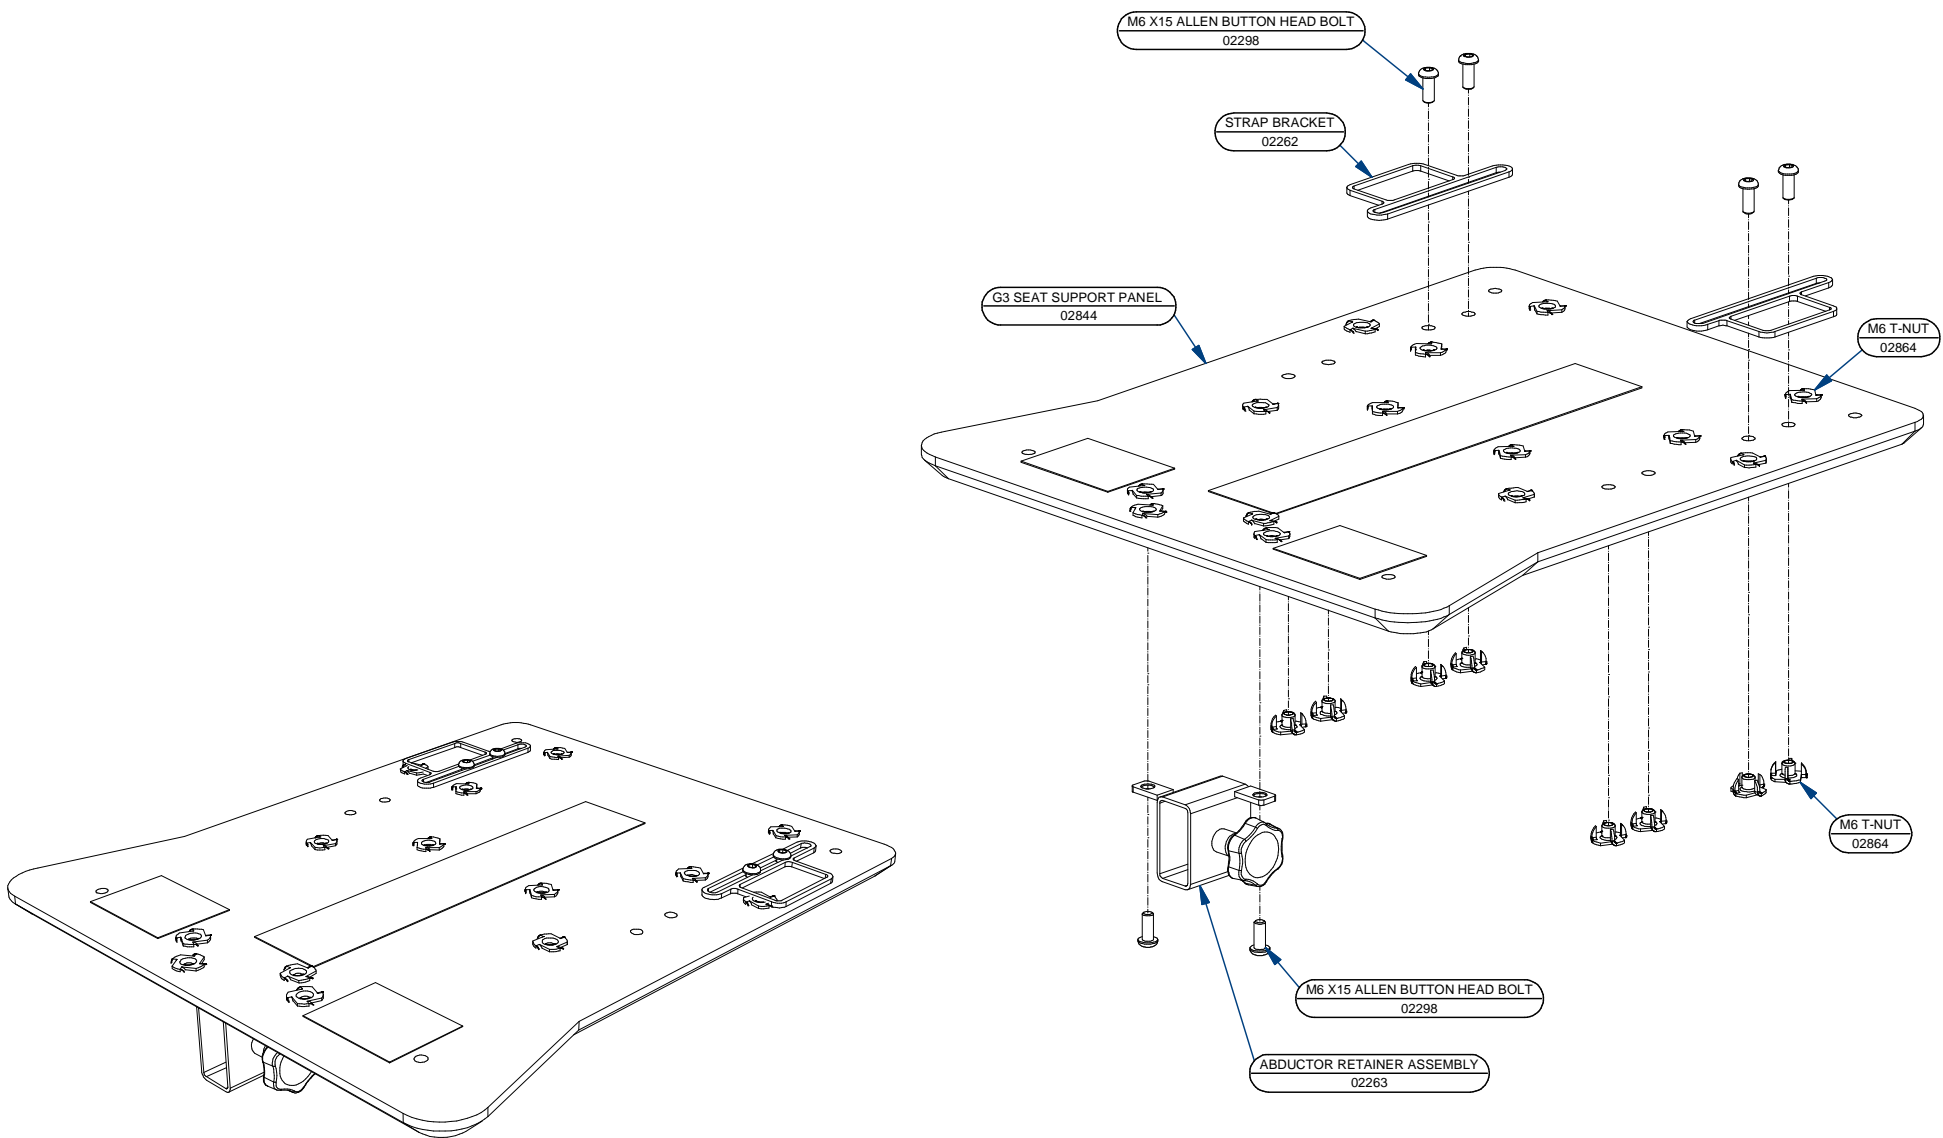


02167	WMSS-01 FOOTREST STAND WELDMENT G2/3
02180	WMSS-01 FOOT PLATE ASSEMBLY G2/3

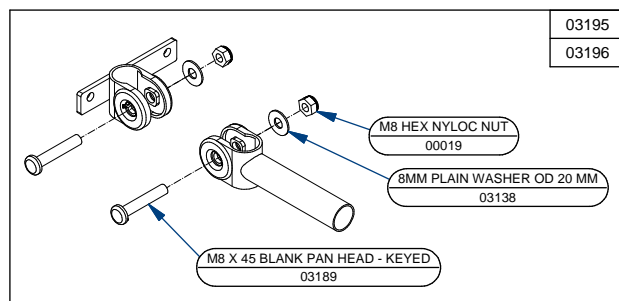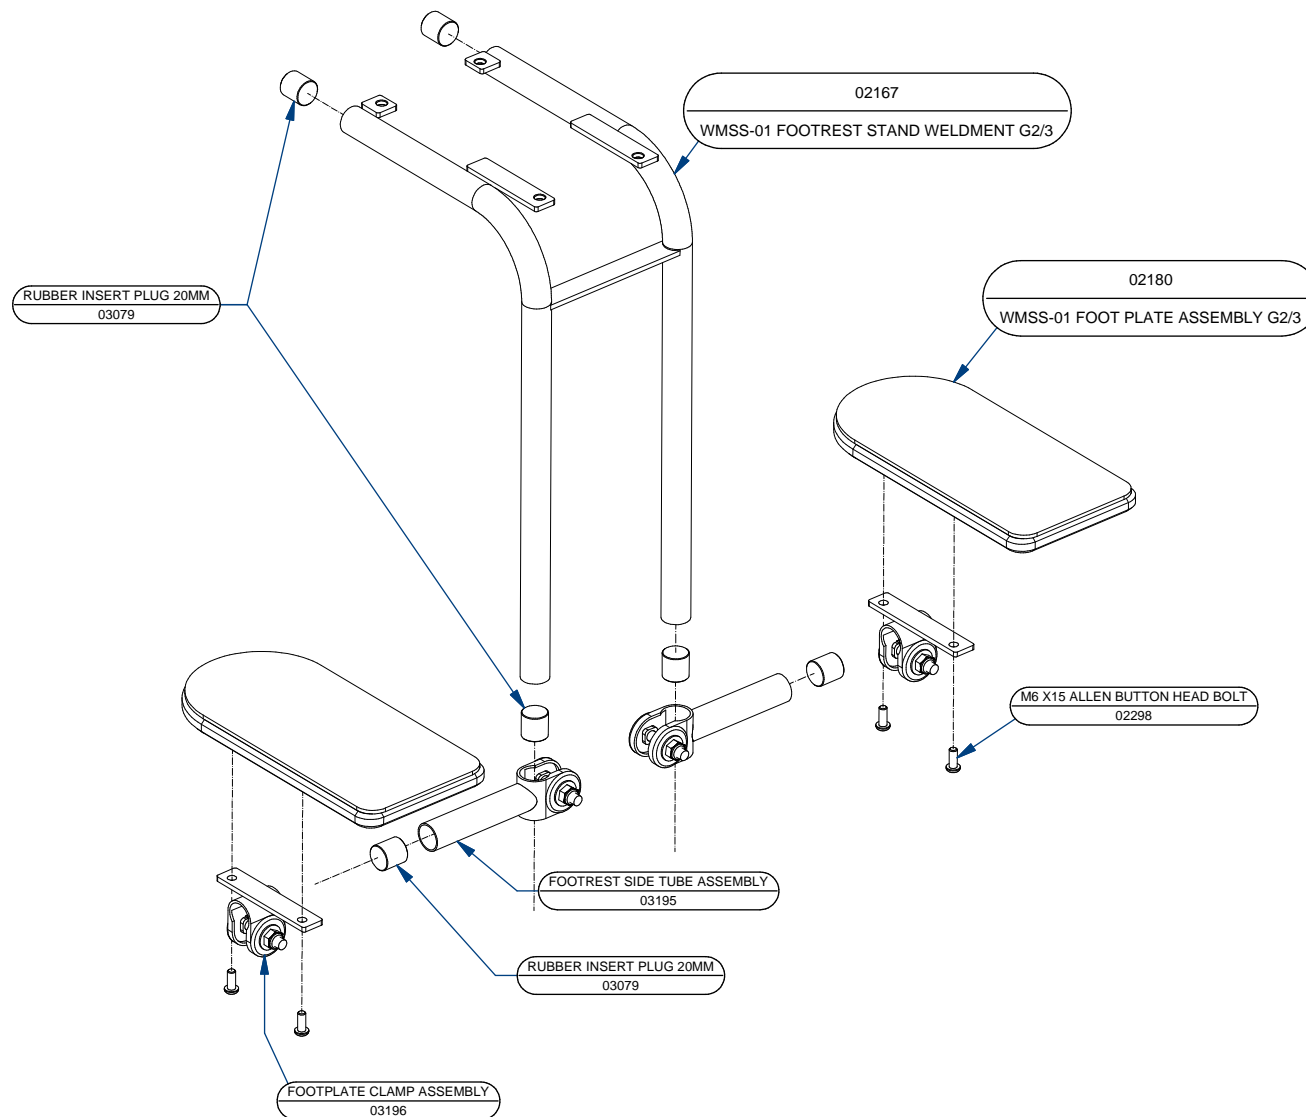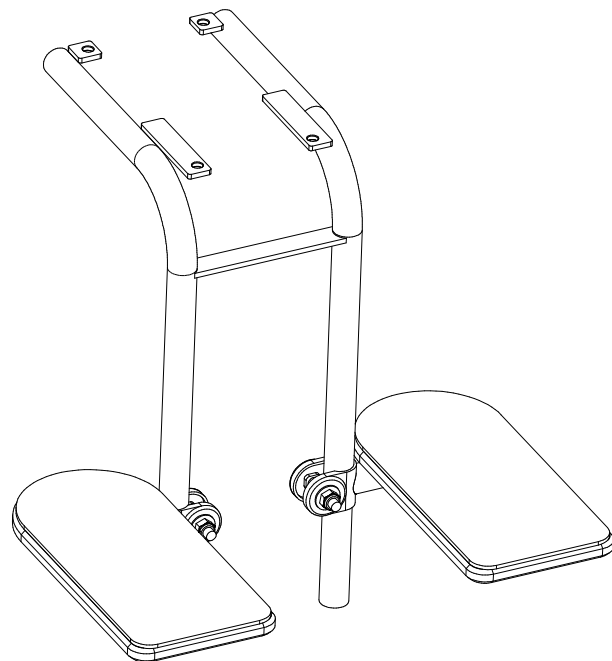


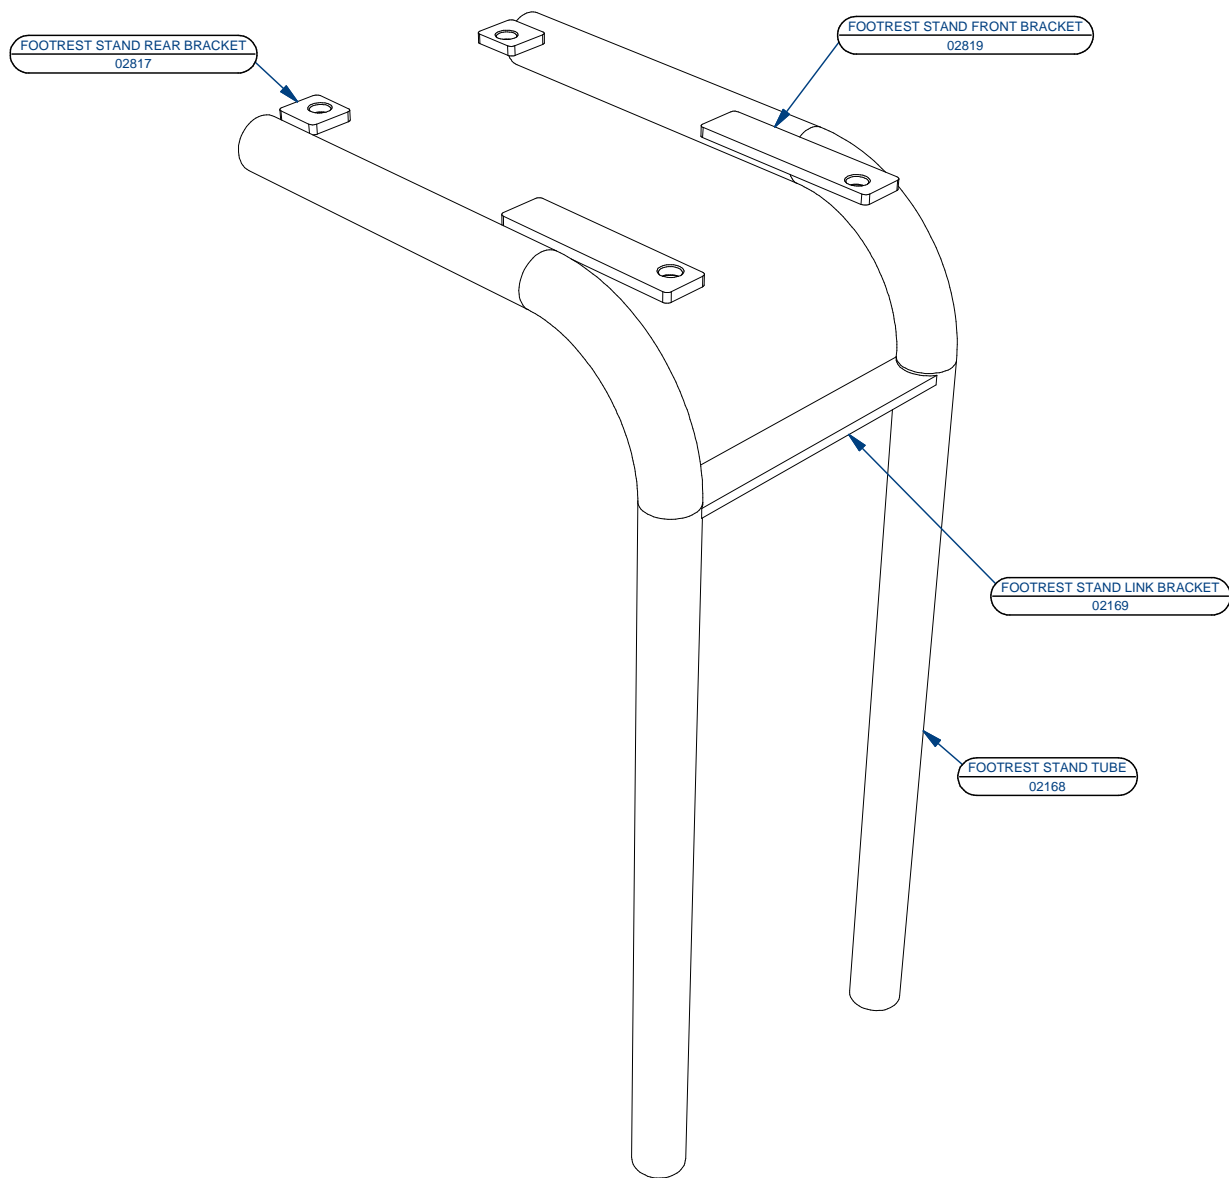

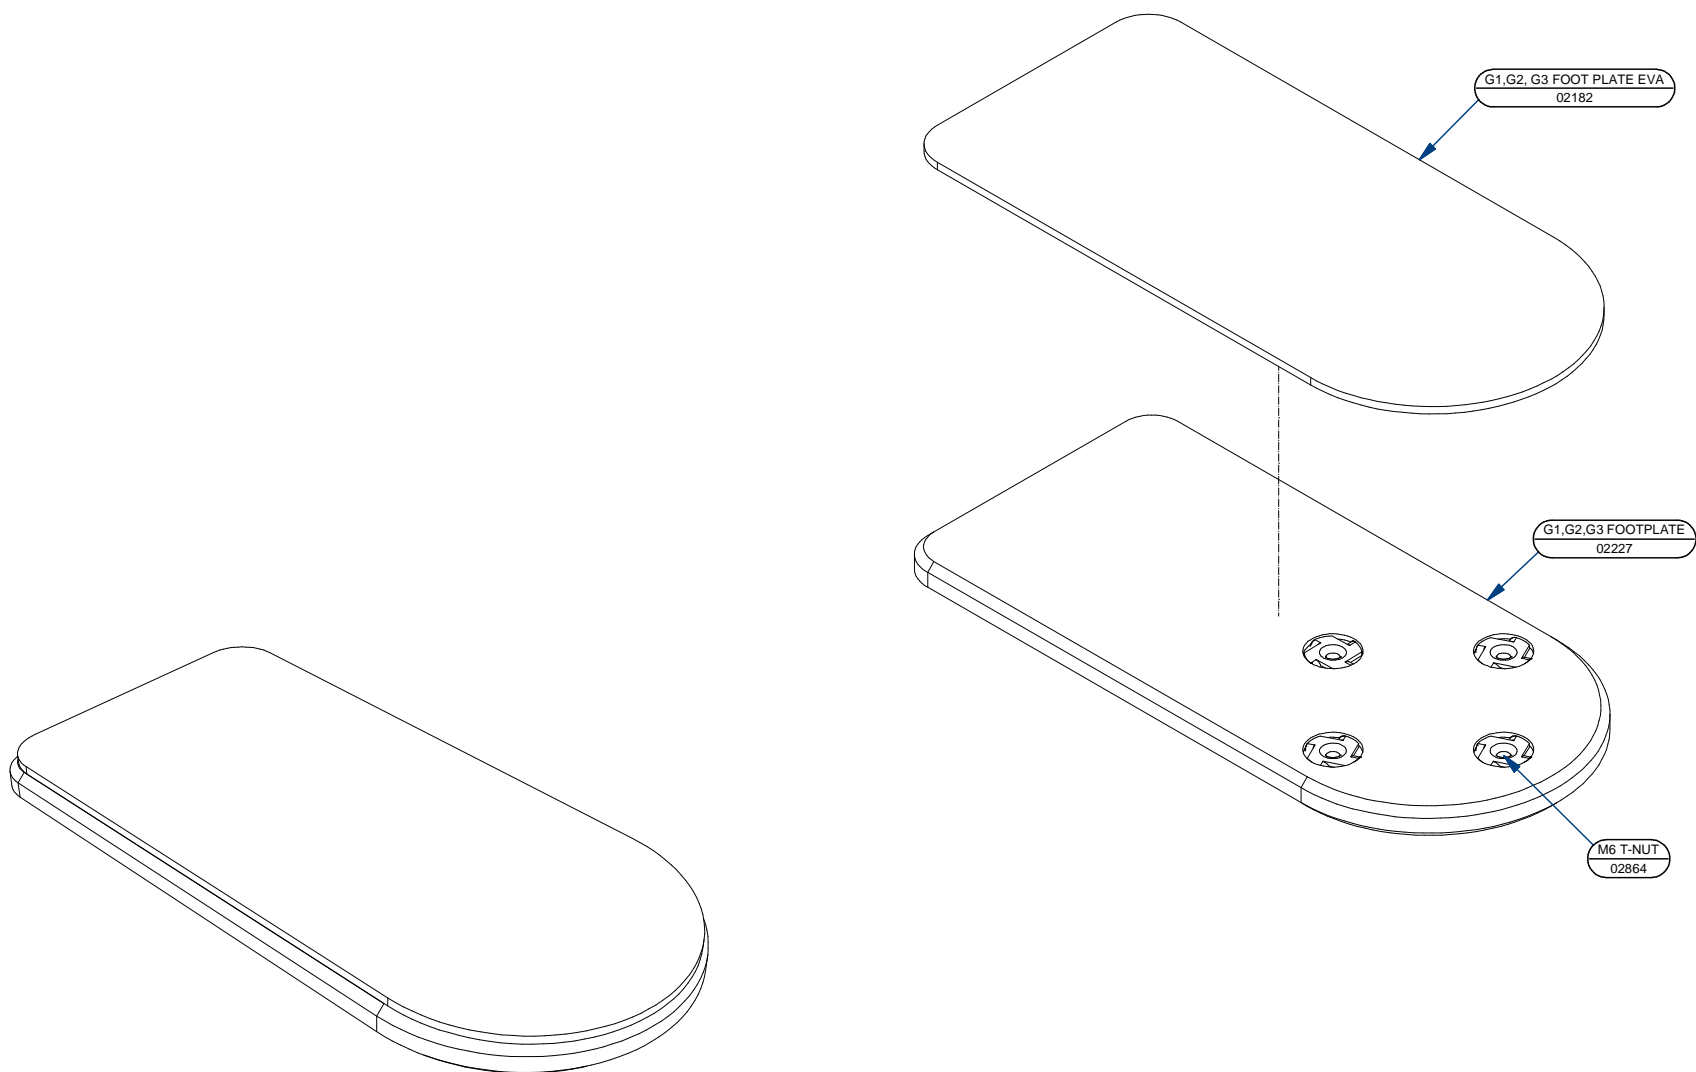



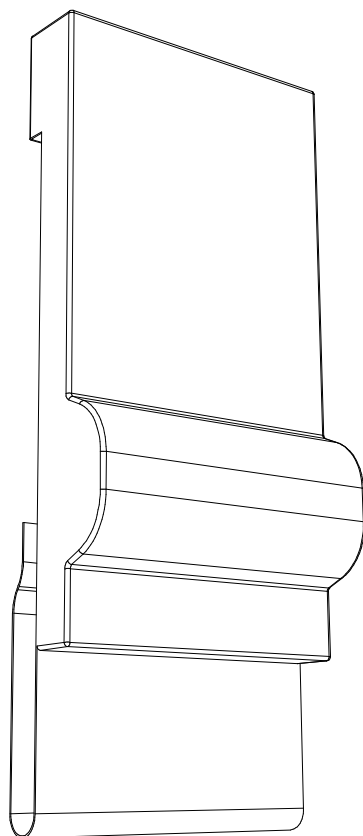



G2 BACKREST FOAM
02146

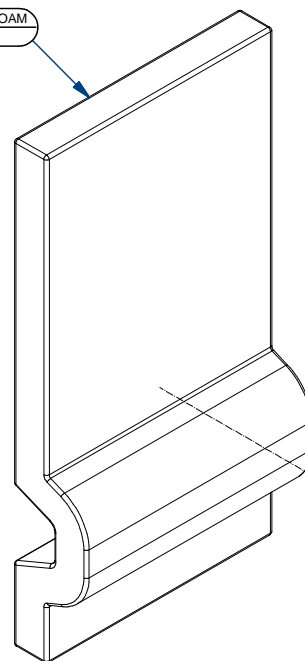



BACKREST COVER (G2)
03171

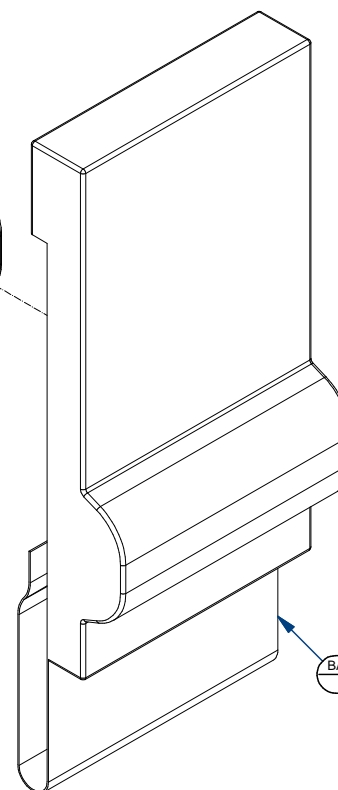


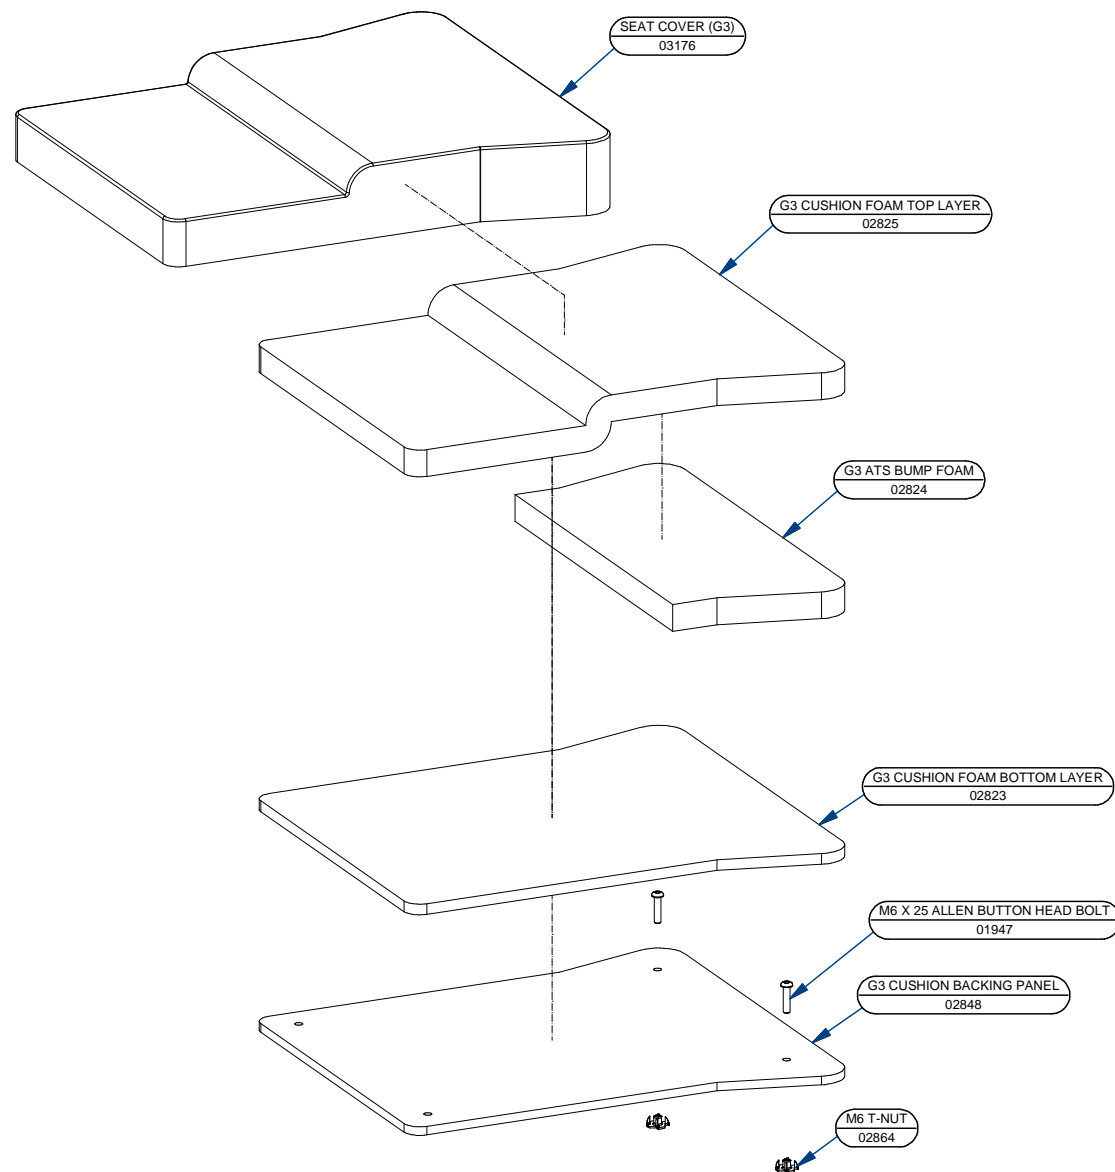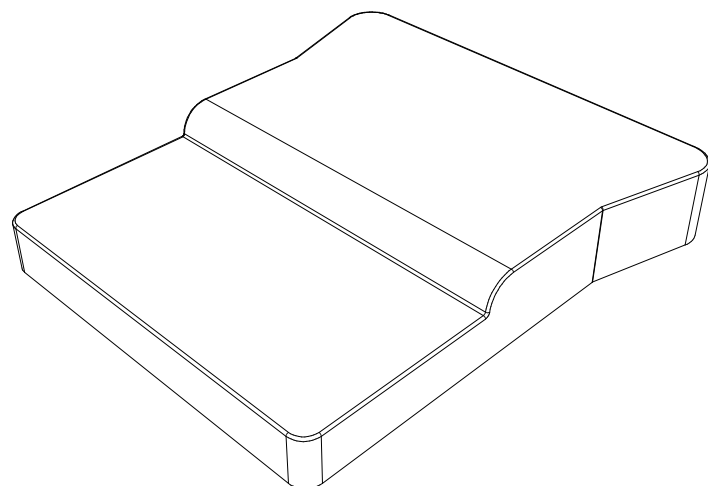


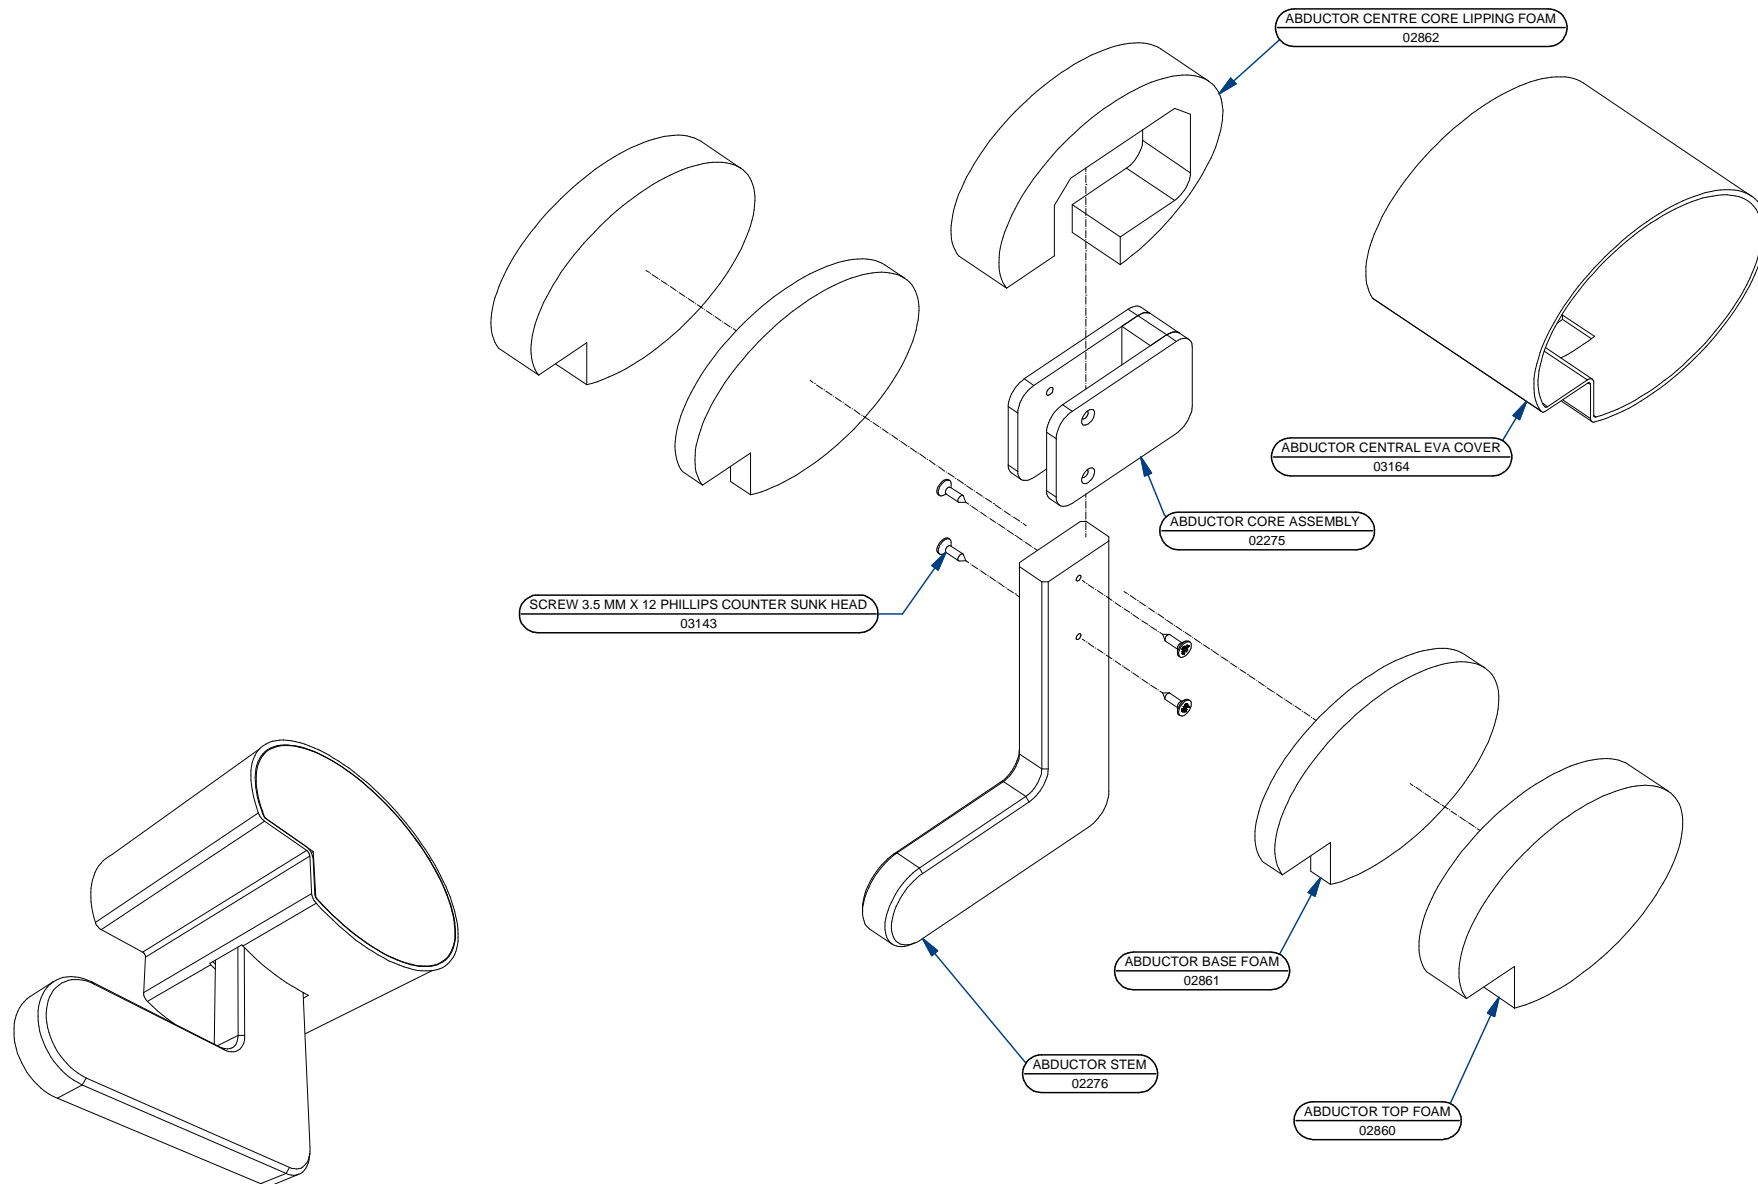

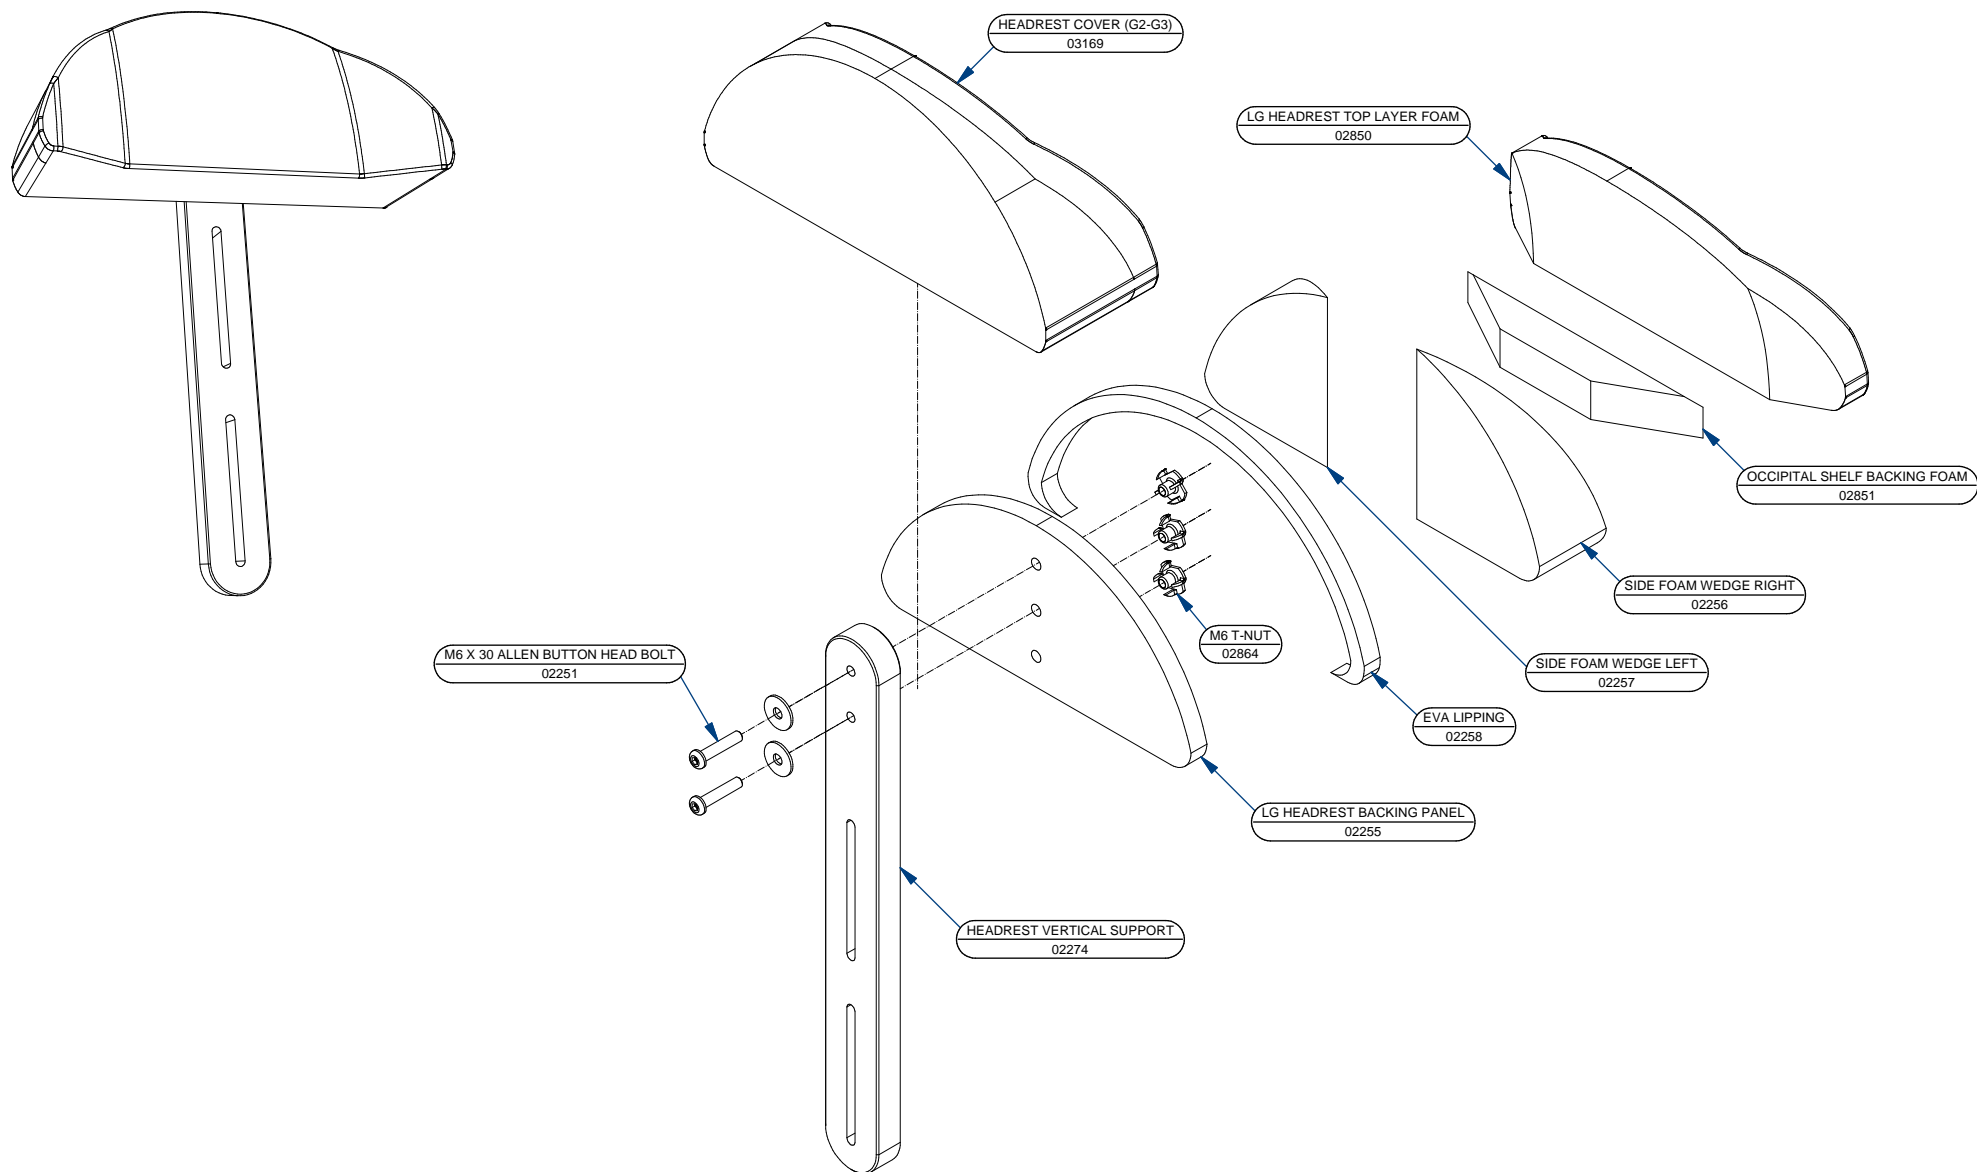


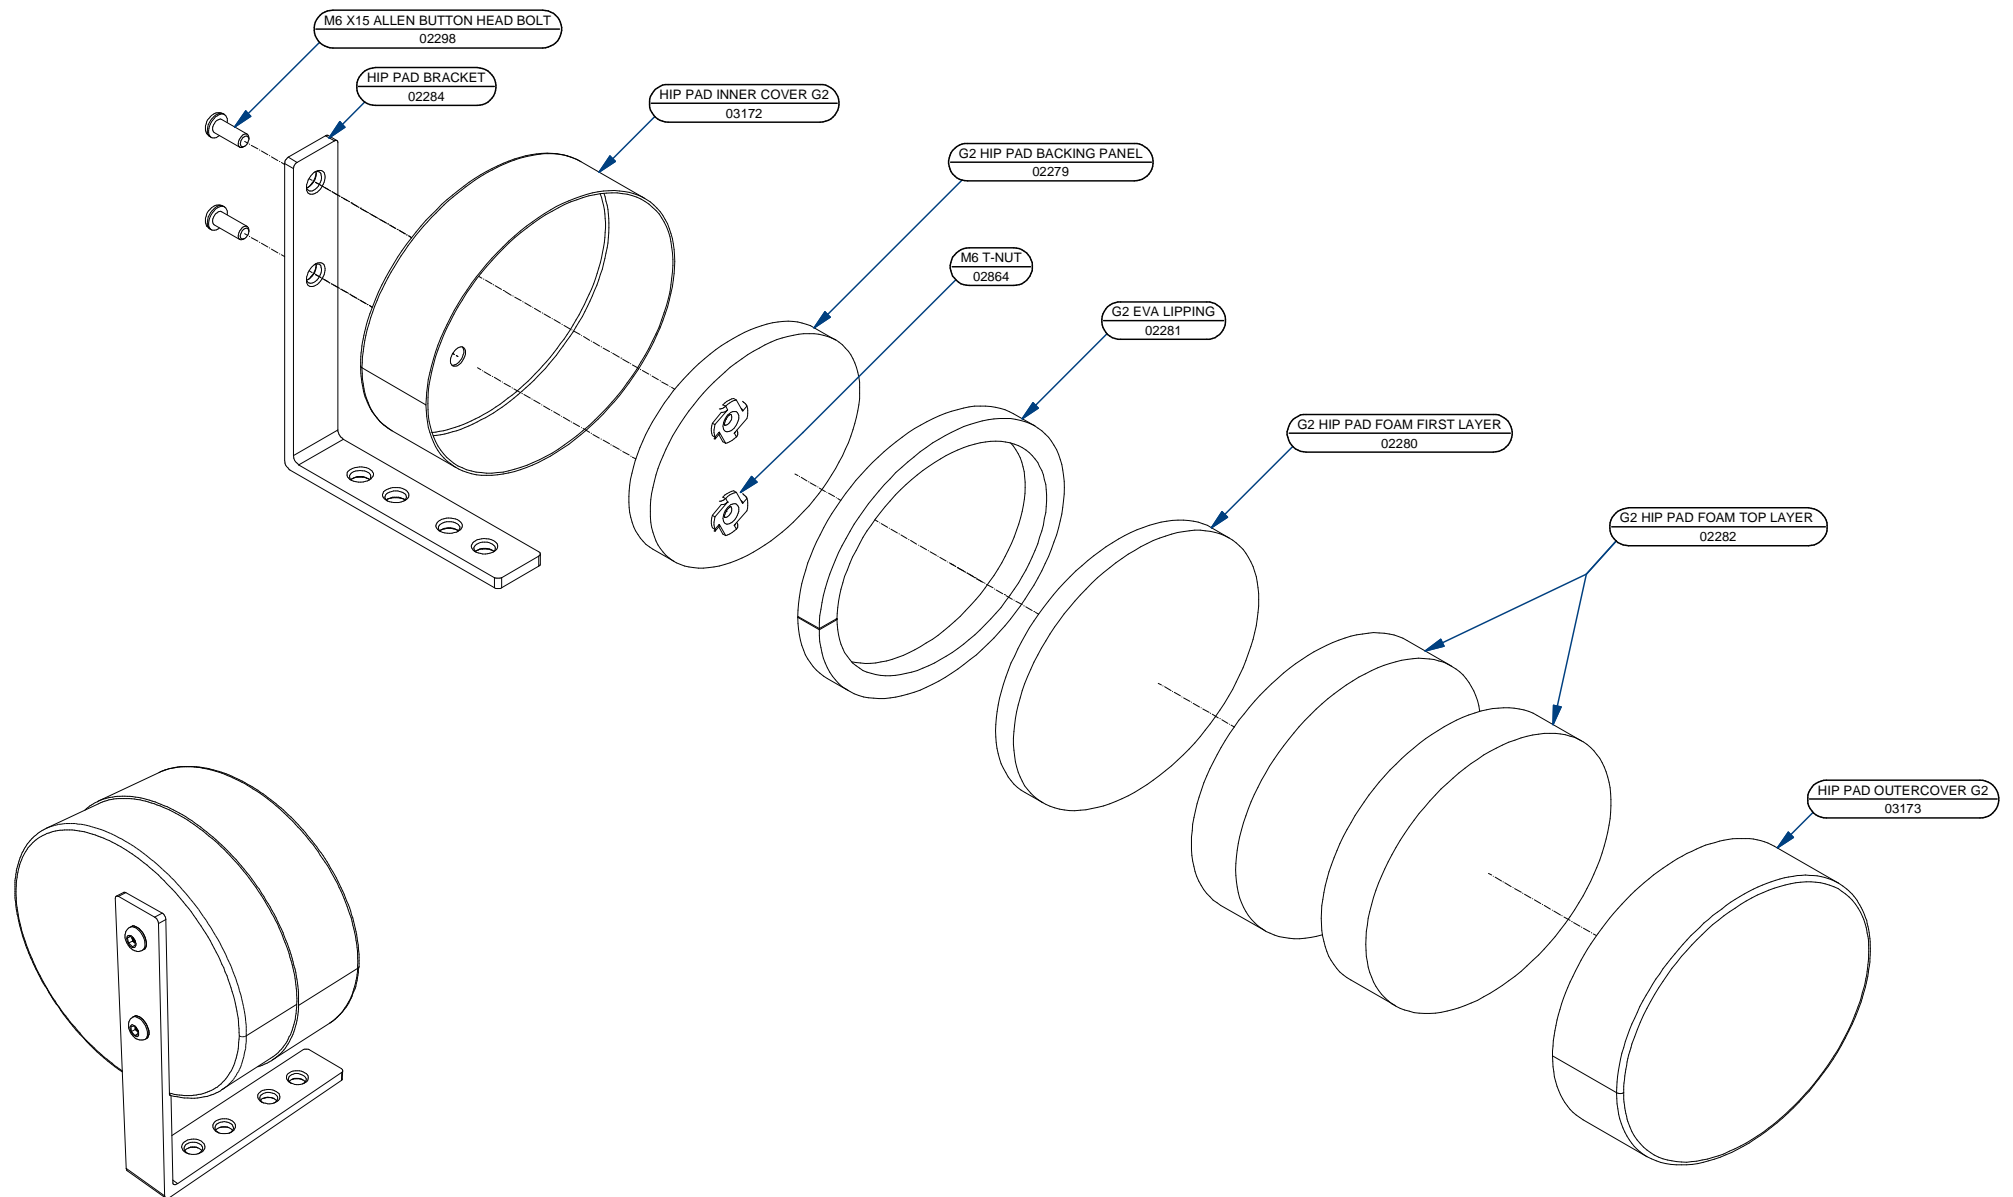

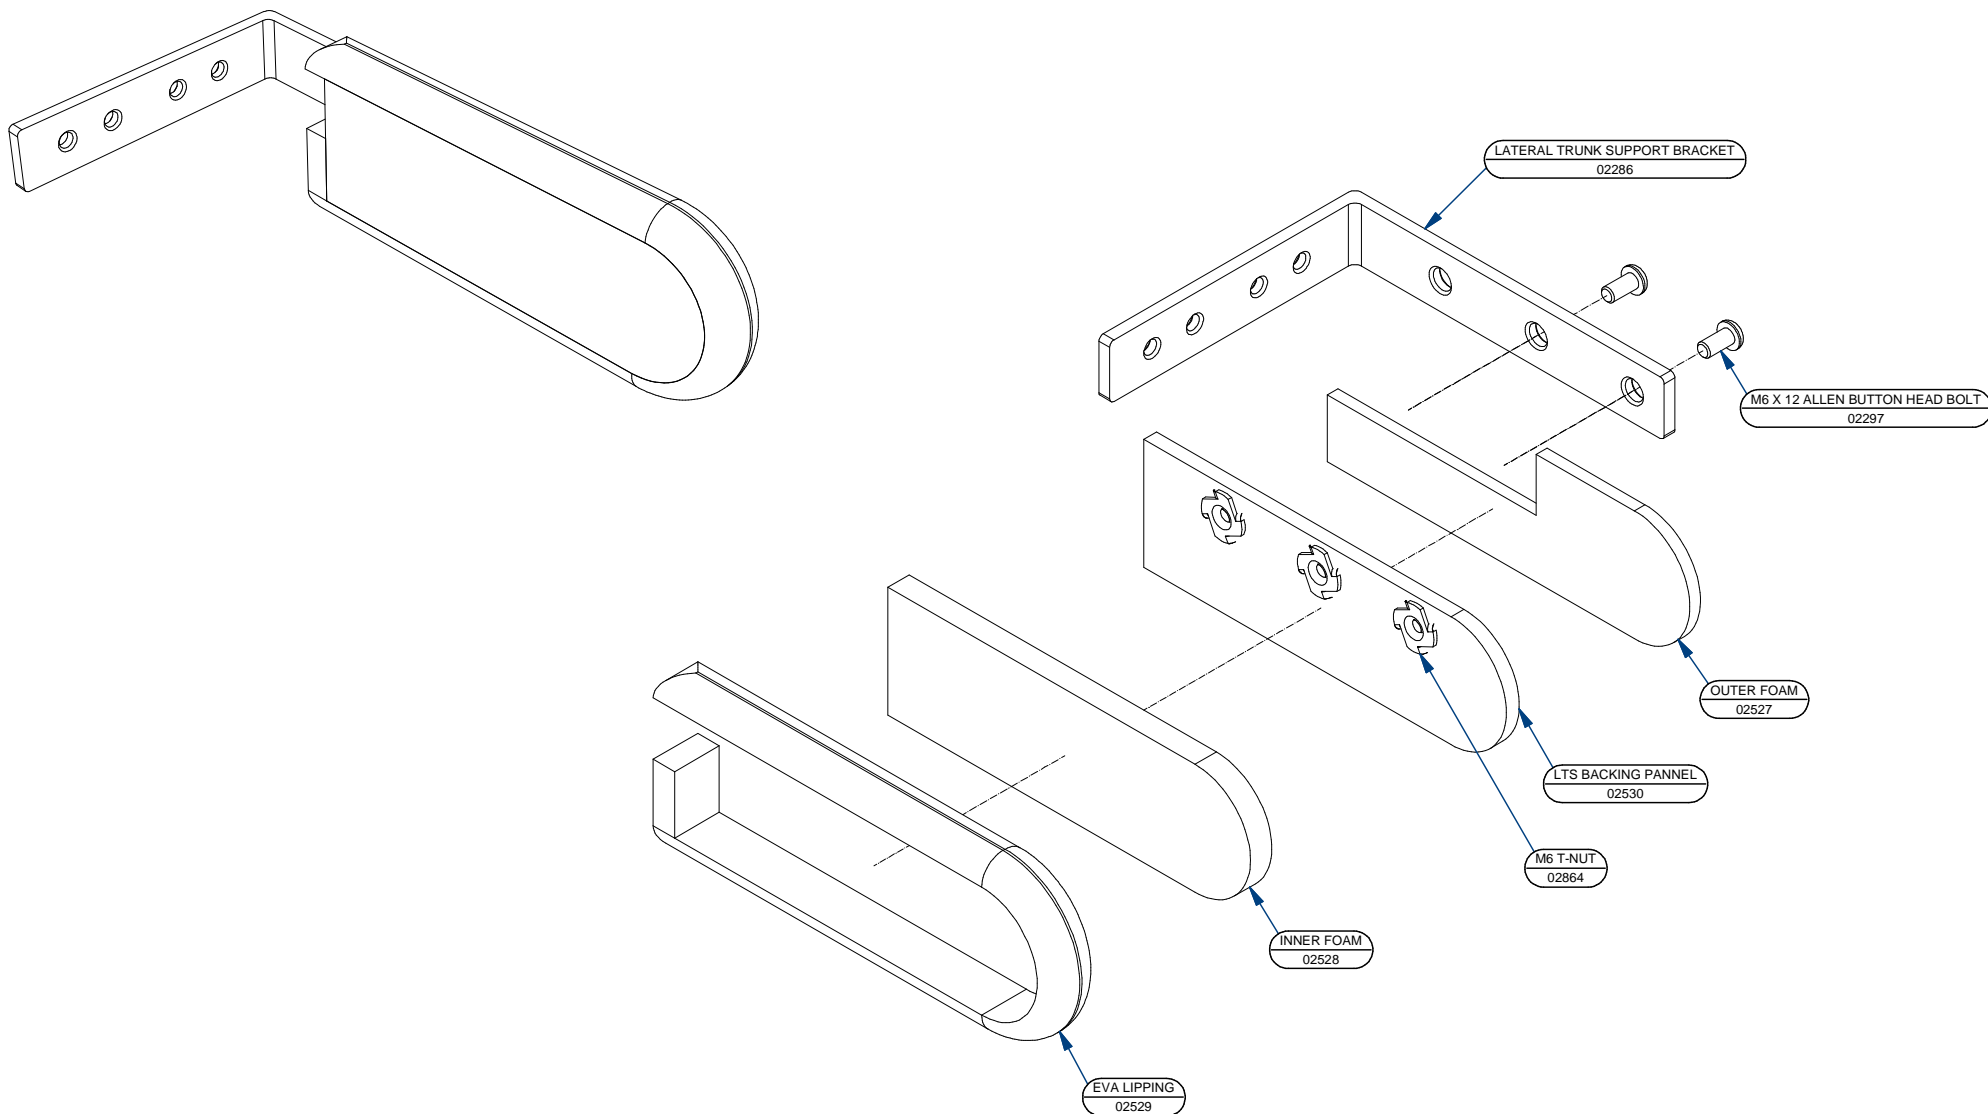

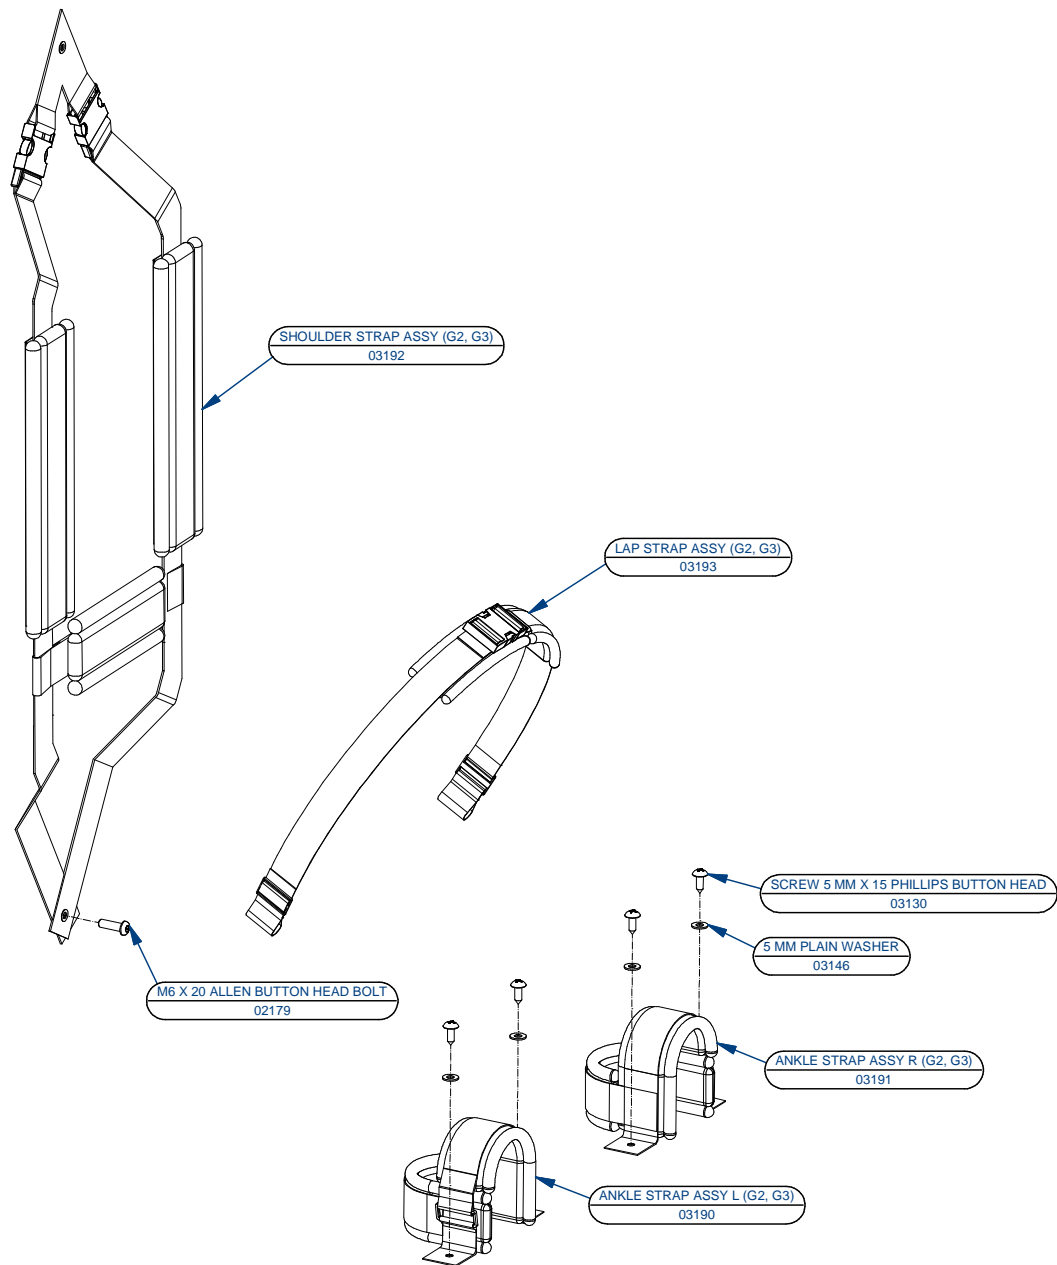

02346 G3 TRAY TOP ASSEMBLY

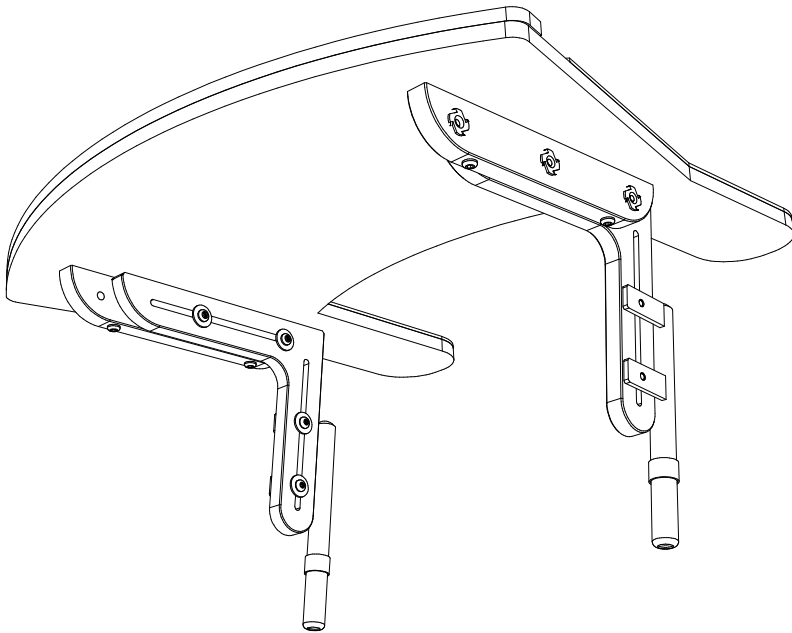


TRAY SUPPORT TUBULAR EXTENSION
04378


M6 X 10 ALLEN BUTTON HEAD BOLT
02501

TUBULAR EXTENSION WELDMENT
04377

NOT INCLUDED IN 02345!

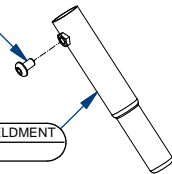

M6 X 35 ALLEN BUTTON HEAD BOLT
03128

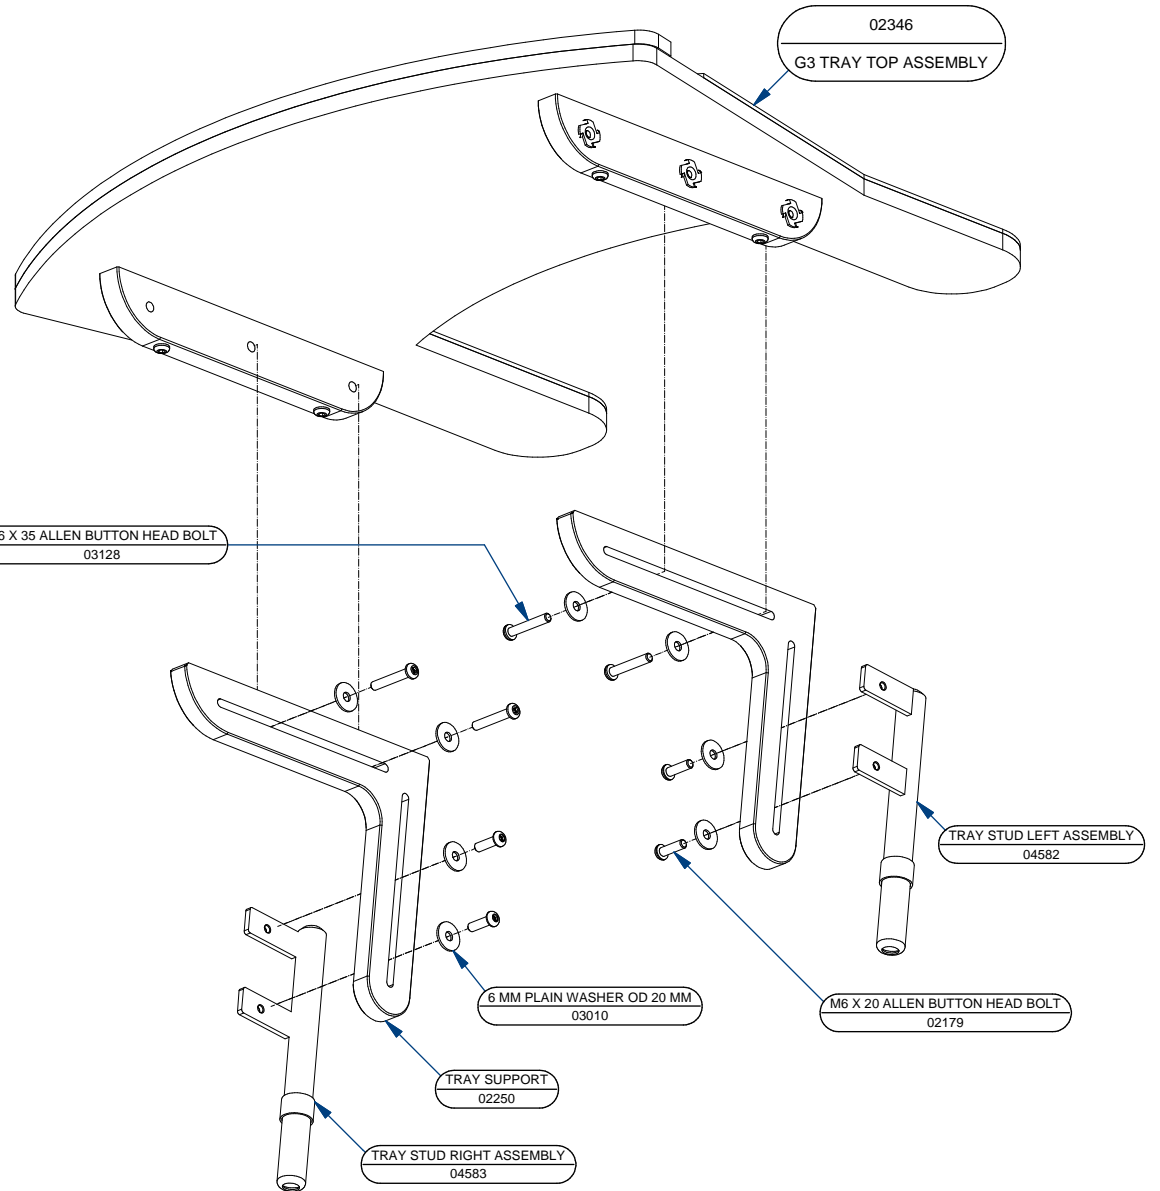

02346

G3 TRAY TOP ASSEMBLY

TRAY STUD LEFT ASSEMBLY
04582



M6 X 20 ALLEN BUTTON HEAD BOLT
02179


6 MM PLAIN WASHER OD 20 MM
03010


TRAY SUPPORT
02250

TRAY STUD RIGHT ASSEMBLY
04583




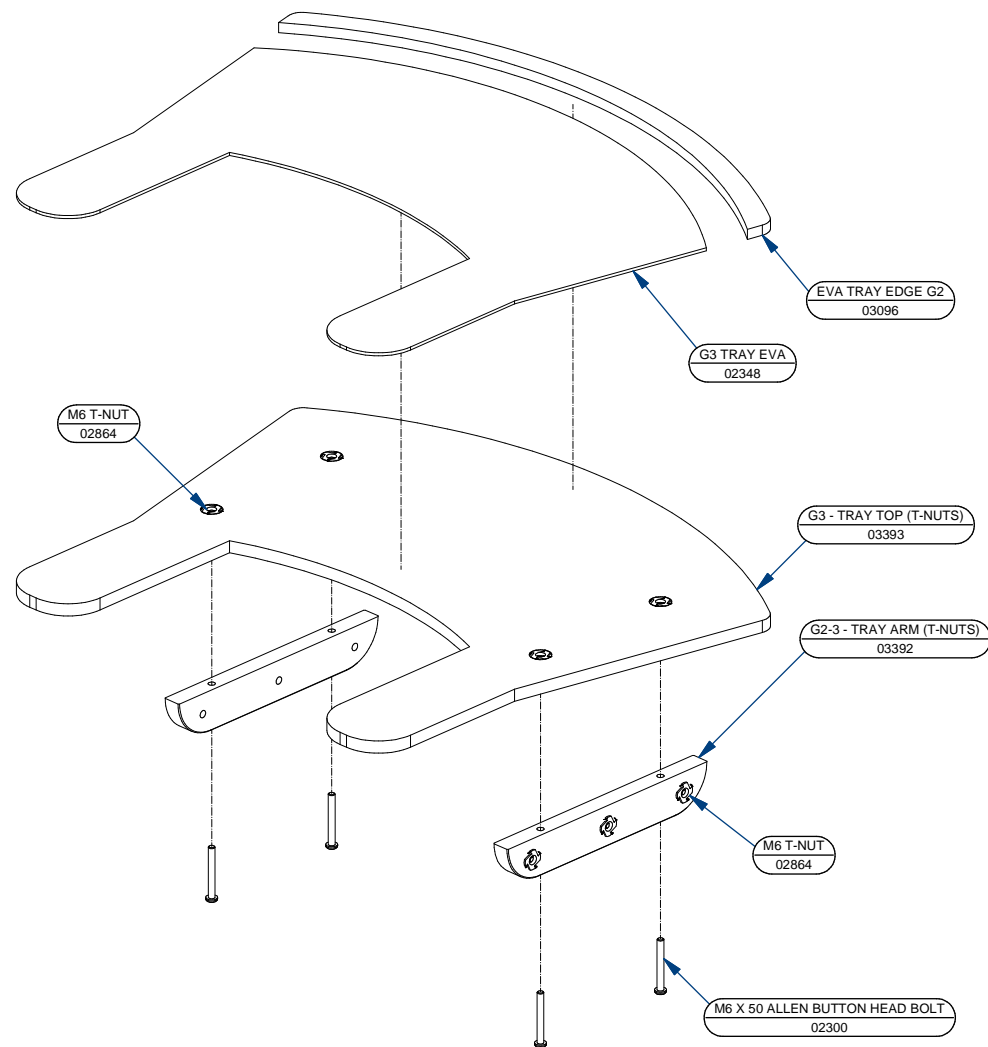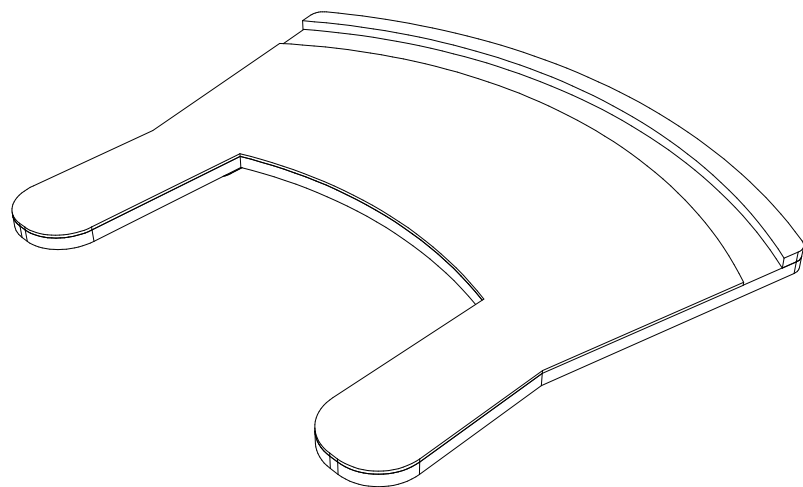

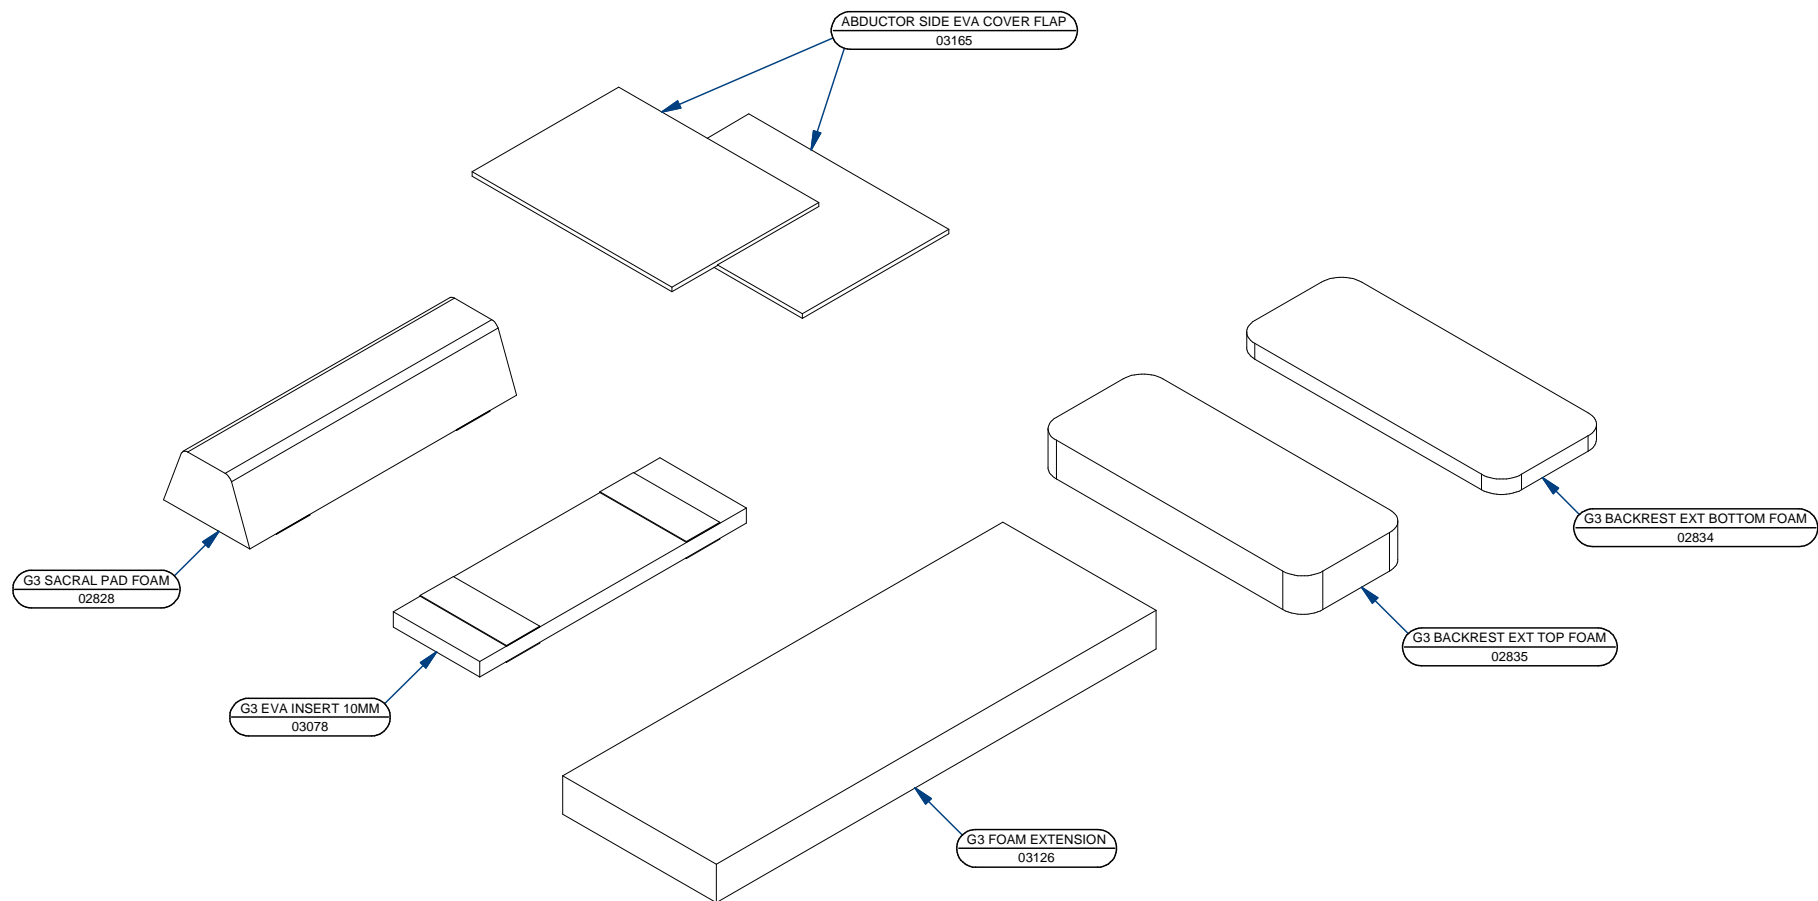


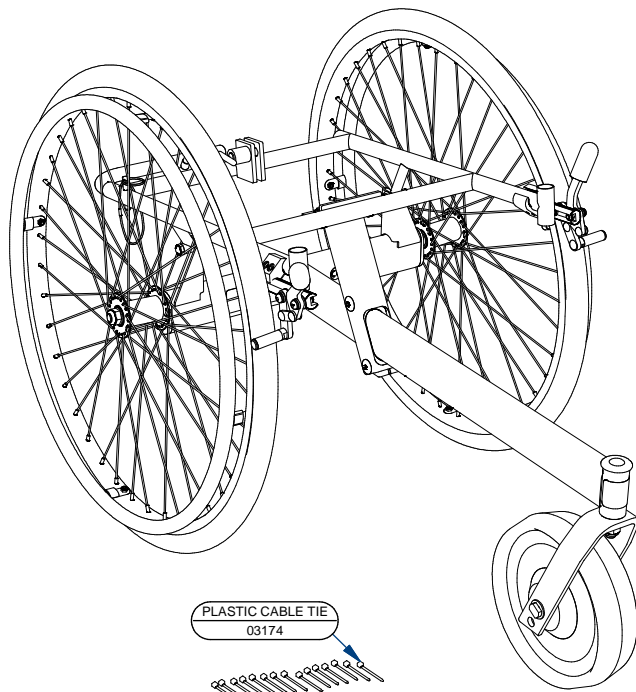

PLASTIC CABLE TIE
03174

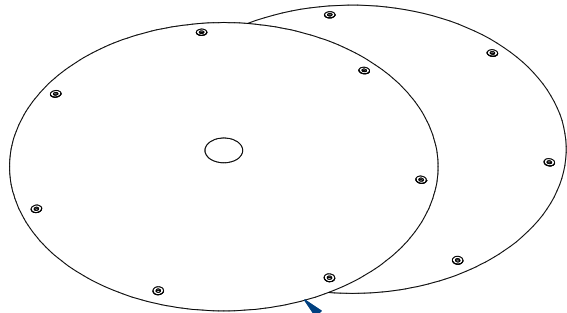

SPOKE GUARD 26" WHEEL
03073

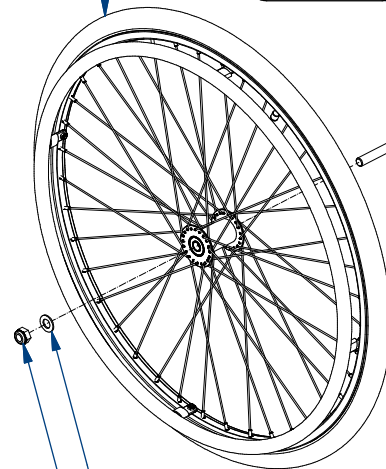

12 MM PLAIN WASHER OD 24 MM
00049

M12 HEX NYLOC NUT
00048

00106
TOGGLE BRAKE GA (DIA 22) - R


00002
REAR WHEEL 26" FINAL ASSEMBLY

AXLE - REAR WHEEL
00118

00105
TOGGLE BRAKE GA (DIA 22) - L

02185
WM3SSP-01 INTERFACE FINAL ASSEMBLY

00105
TOGGLE BRAKE GA (DIA 22) - L

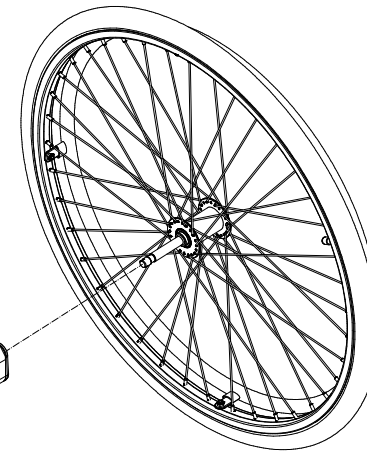

M12 HEX NYLOC NUT
00048

12 MM PLAIN WASHER OD 24 MM
00049

02489
WM3SSP-01 FRAME PRE-ASSEMBLY

00040
220 DIA CASTOR WHEEL/FORK ASSEMBLY

FOOTREST SUPPORT ASSY - SSP VARIANT
02487

M12 X 95 SPANNER BUTTON HEAD BOLT
02491

CASTOR BARREL CAP WASHER 12 X 31
04376

FRAME CLAMP - RIGHT
00065


FRAME CLAMP - LEFT
00064


M8 ALLEN CAP NUT
00007



M8 X 40 ALLEN BUTTON HEAD BOLT
00016


00002	REAR WHEEL 26" FINAL ASSEMBLY
00040	220 DIA CASTOR WHEEL/FORK ASSEMBLY
00105	TOGGLE BRAKE GA (DIA 22) - L
00106	TOGGLE BRAKE GA (DIA 22) - R
02489	WM3SSP-01 FRAME PRE-ASSEMBLY
02185	WM3SSP-01 INTERFACE FINAL ASSEMBLY




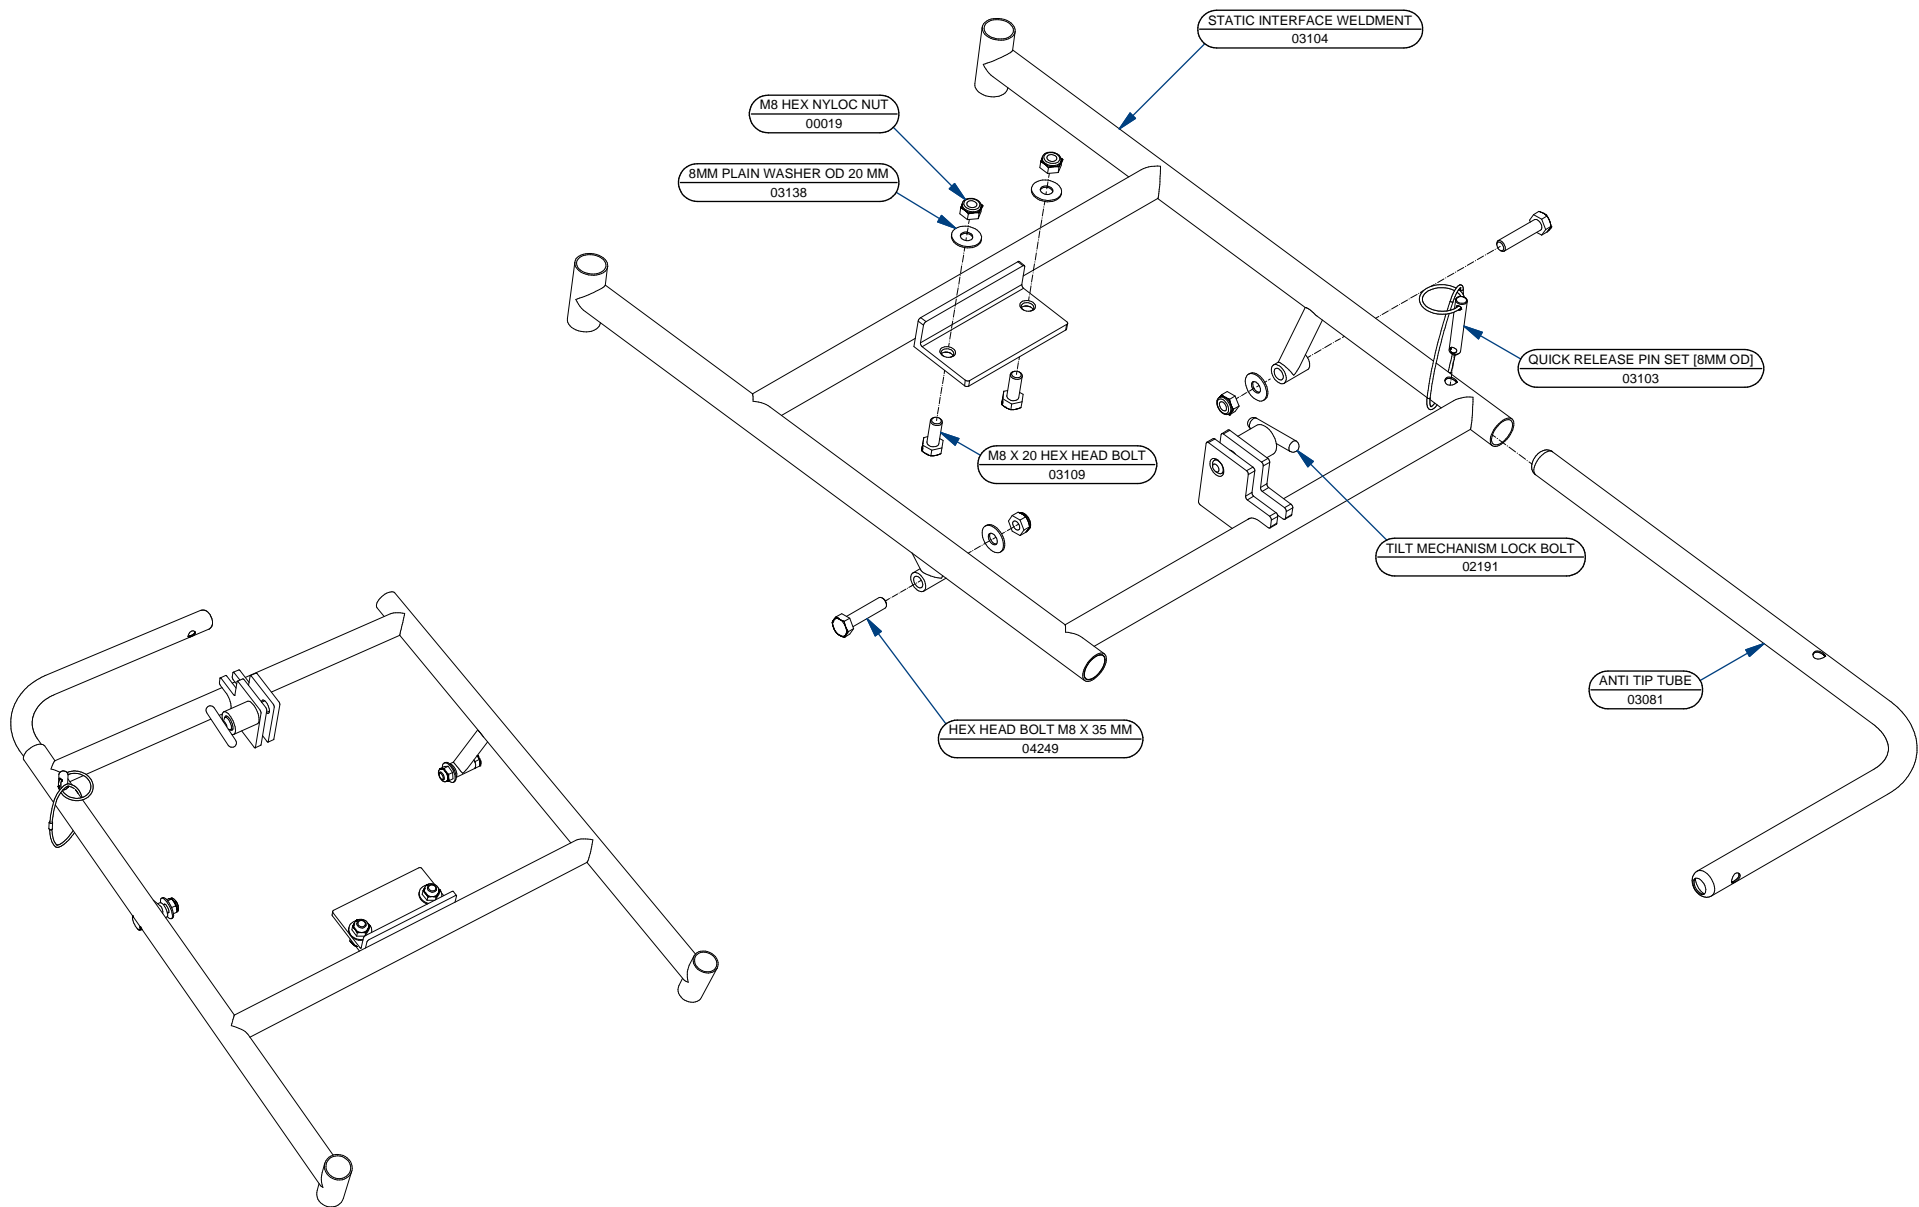


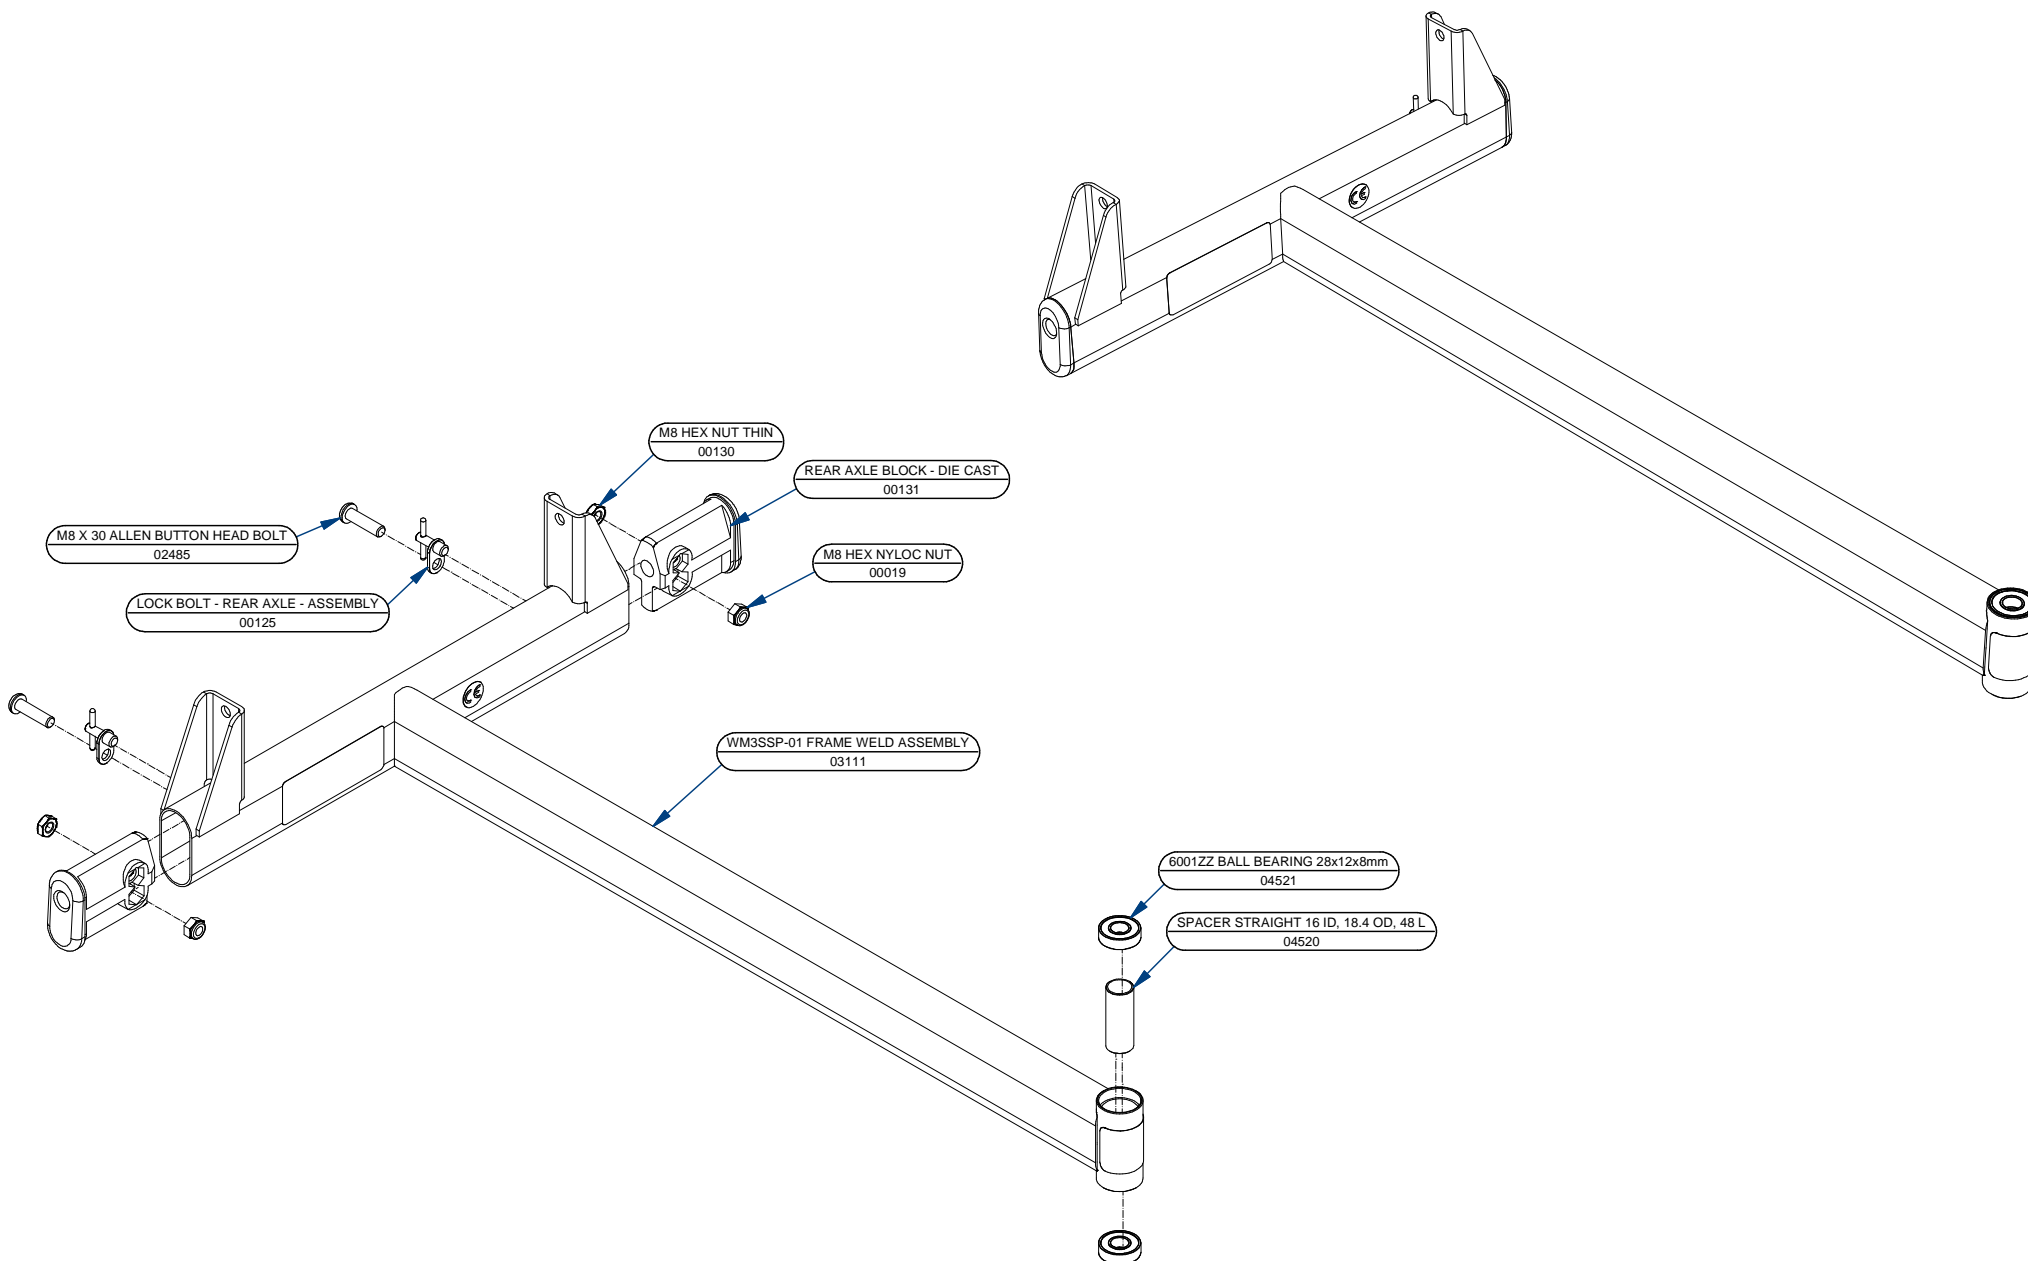


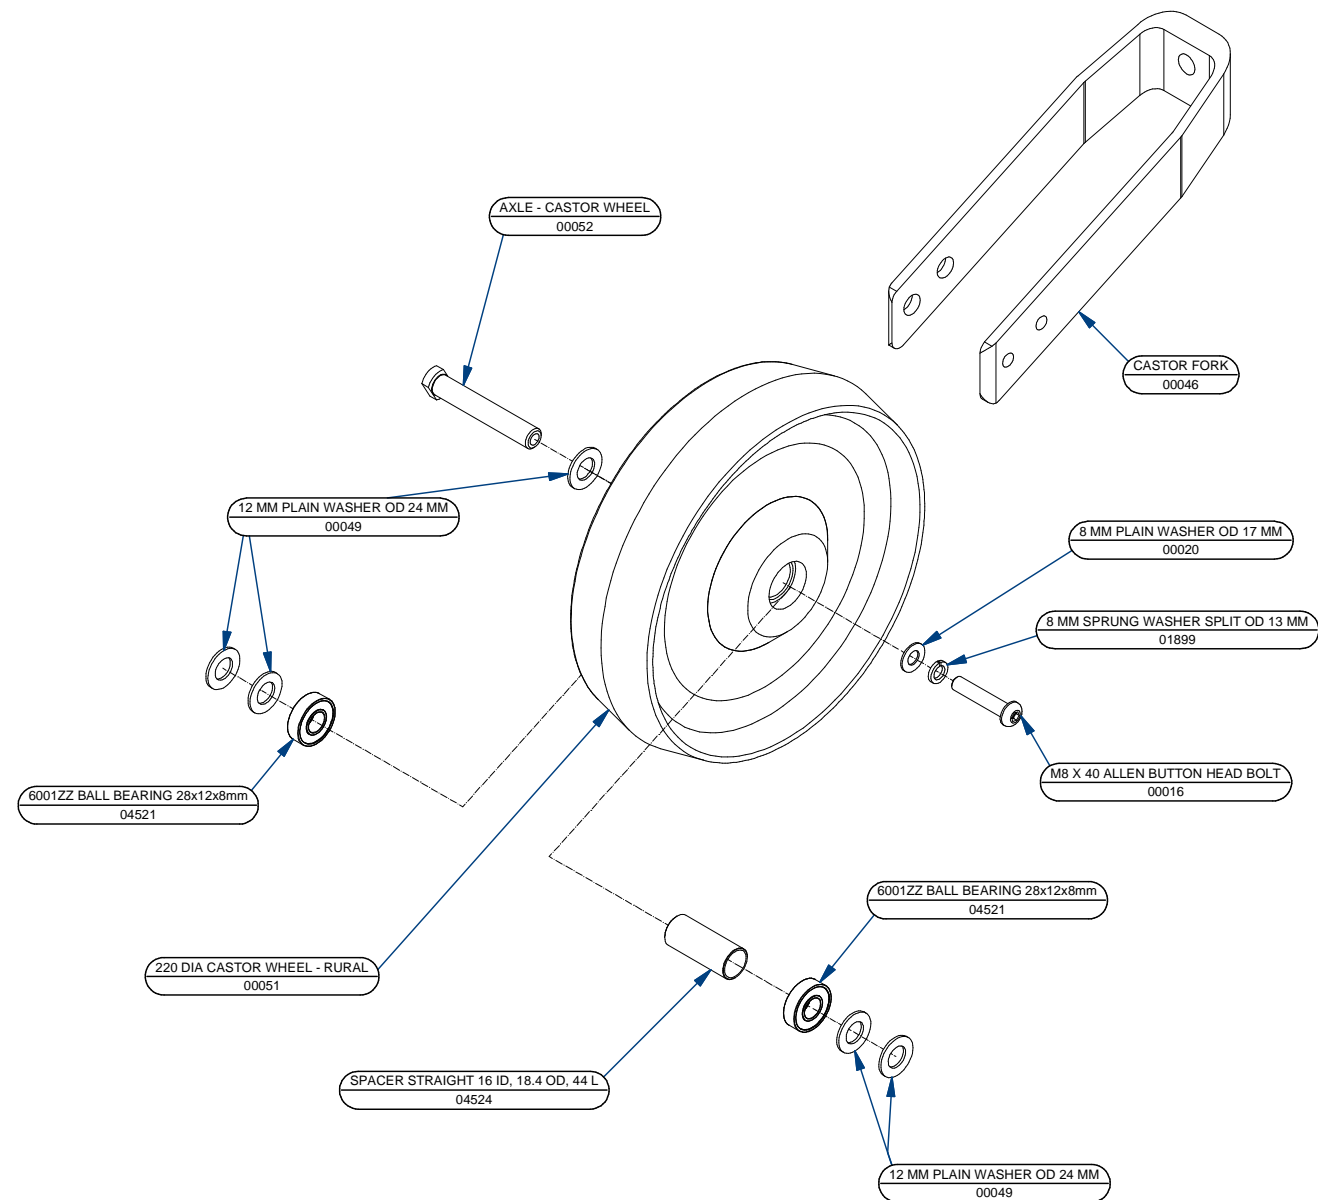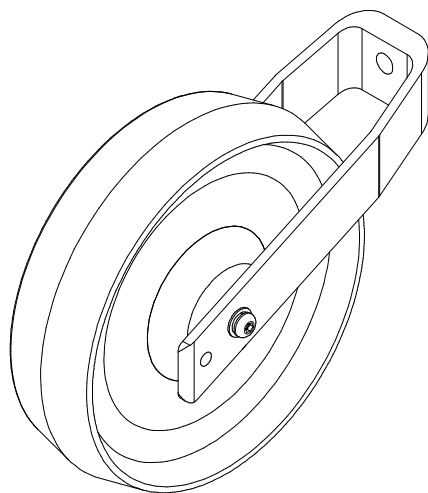

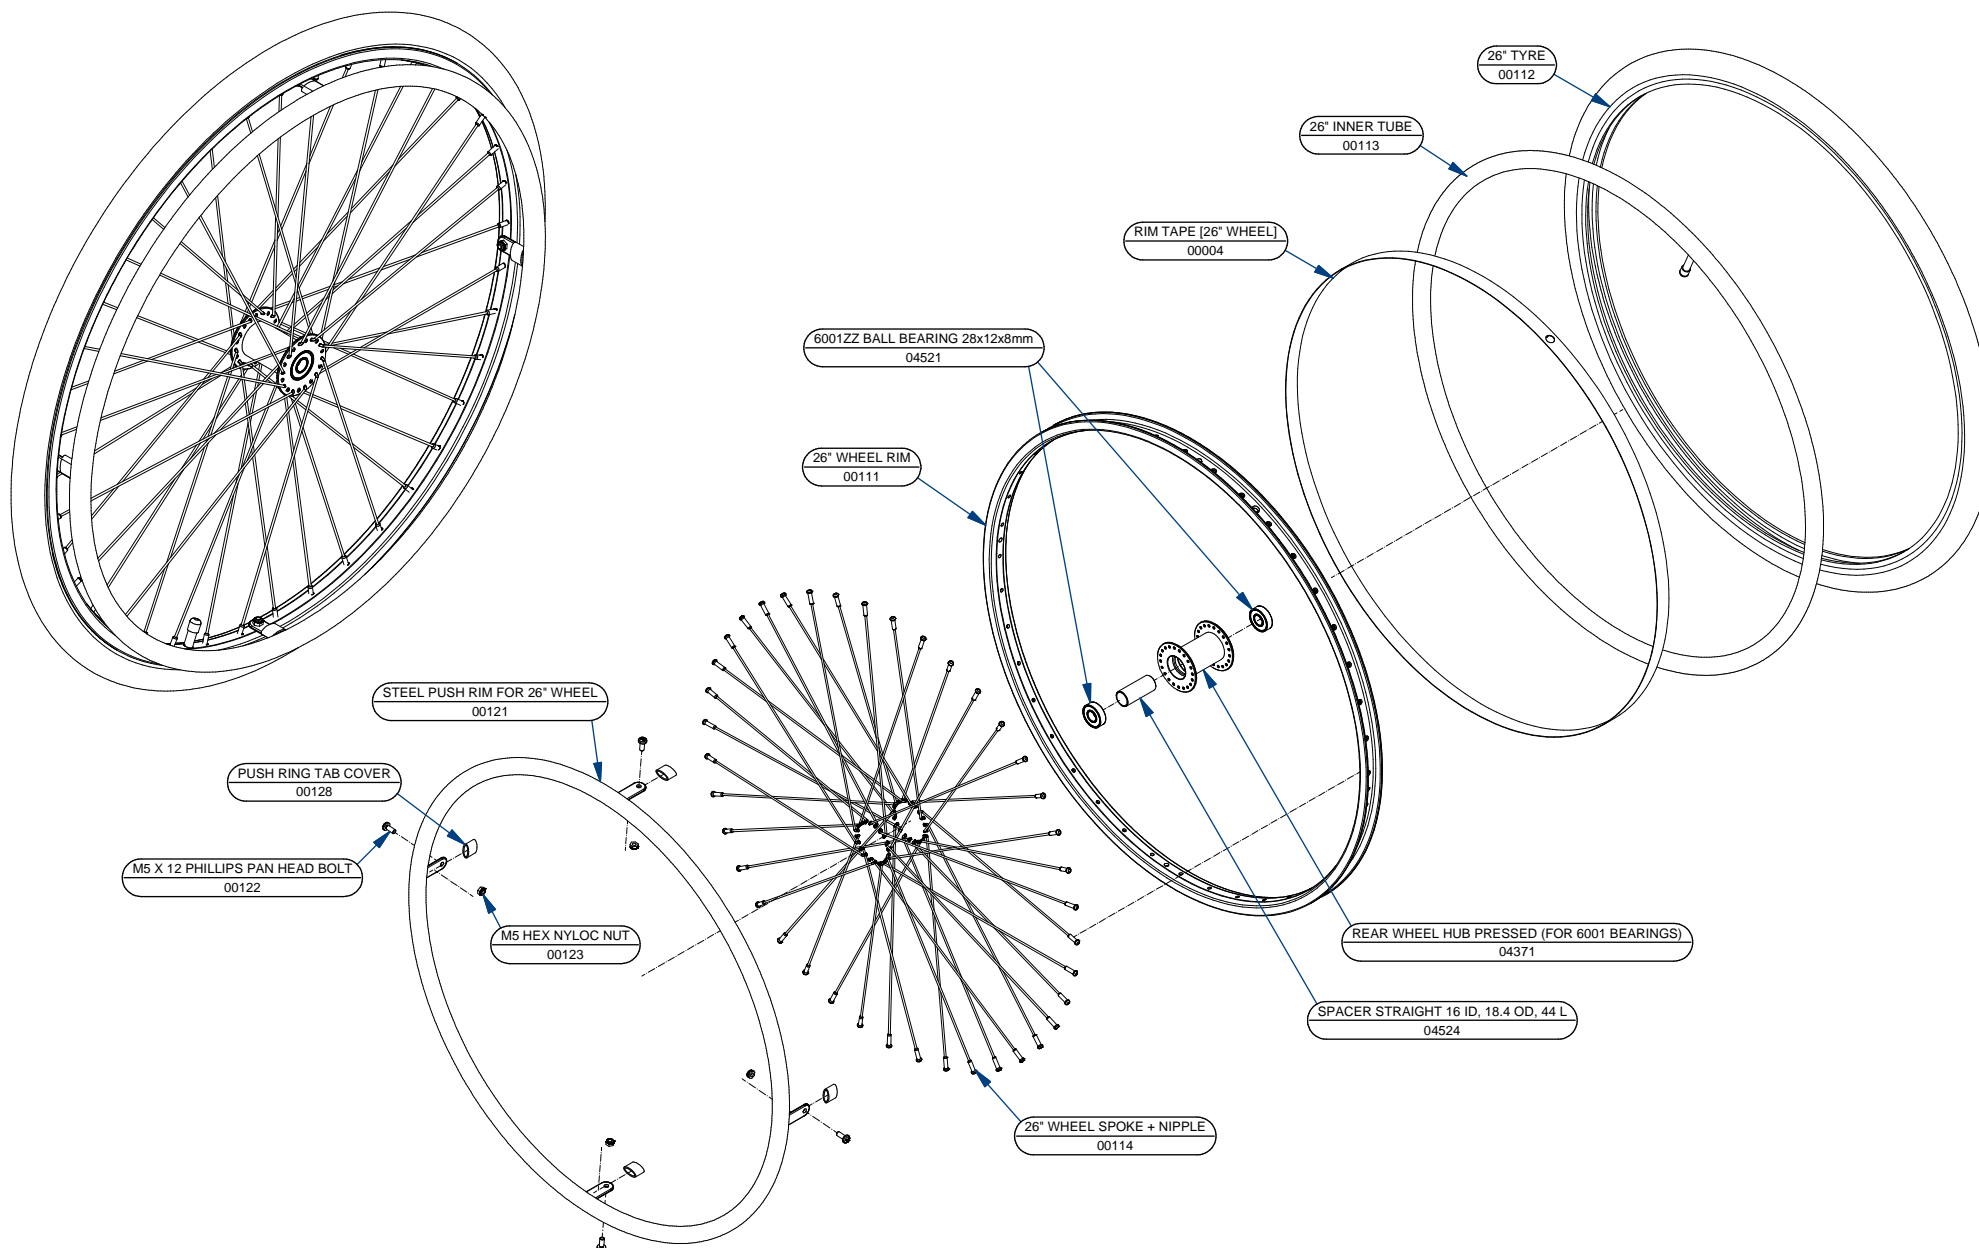

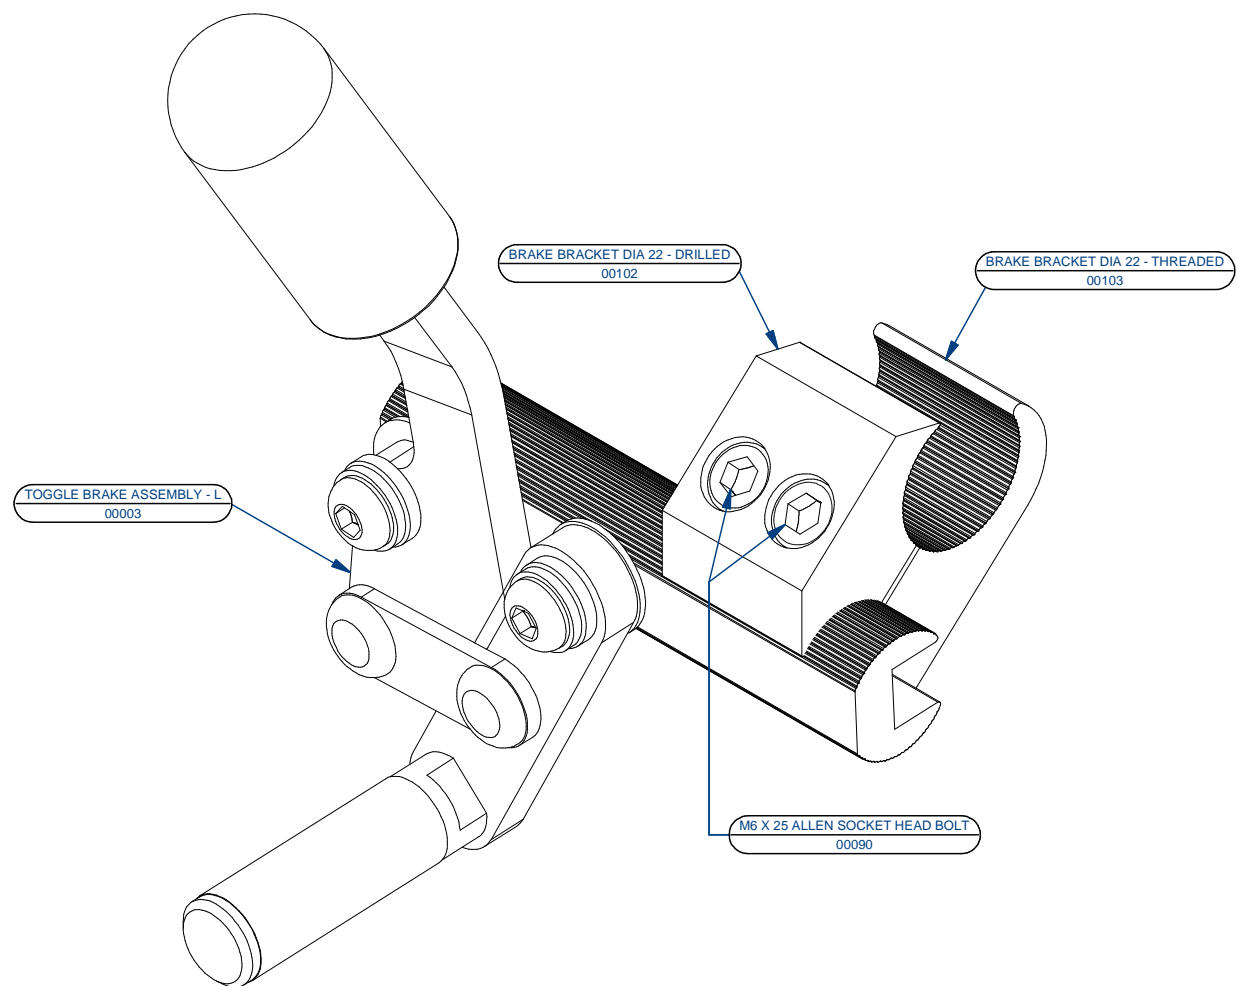

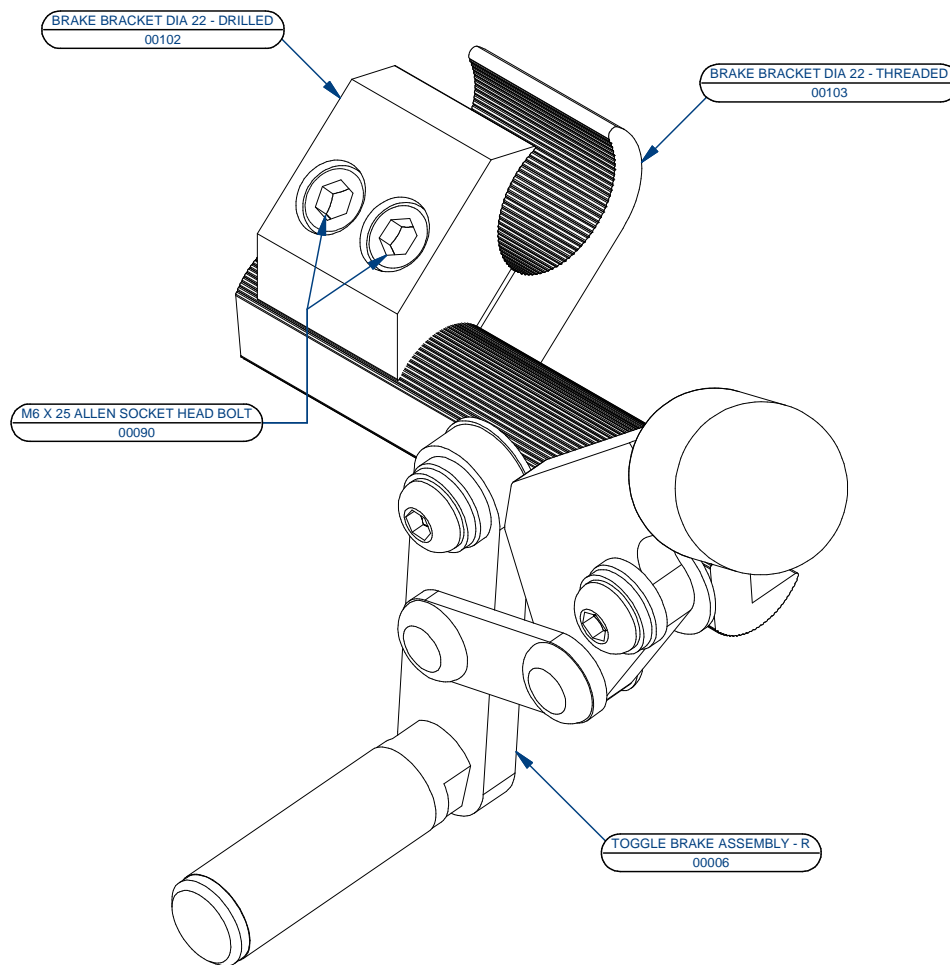

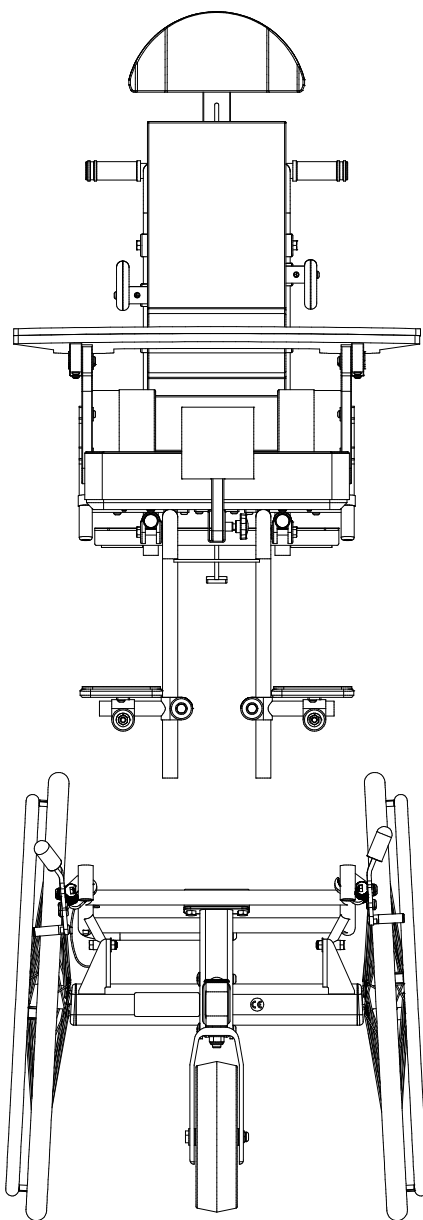

CONTENTS

MOTI GO SUPPORTIVE SEATING SYSTEM SIZE L COVER PAGE	1
MOTI GO SUPPORTIVE SEATING UNIT SIZE L - ASSEMBLY DETAILS	2
MOTI GO SEATING UNIT SIZE L - FRAME ASSEMBLY DETAILS	3
MOTI GO SEATING UNIT SIZES M/L - FRAME WELDMENT DETAILS	4
MOTI-GO SEATING UNIT SIZE L - SEAT SUPPORT PANEL ASSEMBLY DETAILS	5
MOTI GO SEATING UNIT SIZES M/L - FOOTREST STAND ASSEMBLY DETAILS	6
MOTI GO SEATING UNIT SIZES M/L - FOOTREST STAND WELDMENT DETAILS	7
MOTI GO SEATING UNIT SIZES M/L - FOOTPLATE ASSEMBLY DETAILS	8
MOTI GO SEATING UNIT SIZE L - BACKREST FOAM ASSEMBLY DETAILS	9
MOTI GO SEATING UNIT SIZE L - SEAT CUSHION ASSEMBLY DETAILS	10
MOTI START & MOTI GO - ABDUCTOR ASSEMBLY DETAILS	11
MOTI GO SIZES M/L - HEADREST ASSEMBLY DETAILS	12
MOTI GO SIZE L - HIP PAD UNIT ASSEMBLY DETAILS	13
MOTI START & MOTI GO - LATERAL TRUNK SUPPORT ASSEMBLY DETAILS	14
MOTI GO SEATING UNIT SIZES M/L - STRAPS AND FASTENERS DETAILS	15
MOTI GO SEATING UNIT SIZE L - TRAY ASSEMBLY DETAILS	16
MOTI GO SEATING UNIT SIZE L - TRAY TOP ASSEMBLY DETAILS	17
MOTI GO SEATING UNIT SIZE L - EXTRA UPHOLSTERY COMPONENTS	18
MOTI GO SUPPORTIVE SEATING CHASSIS - ASSEMBLY DETAILS	19
MOTI GO SEATING UNIT/CHASSIS INTERFACE - ASSEMBLY DETAILS	20
MOTI GO SUPPORTIVE SEATING CHASSIS FRAME - ASSEMBLY DETAILS	21
220 DIA CASTOR WHEEL/FORK - ASSEMBLY DETAILS	22
REAR WHEEL 26" FINAL ASSEMBLY - ASSEMBLY DETAILS	23
TOGGLE BRAKE LEFT (22 MM CLAMP) - GENERAL ASSEMBLY	24
TOGGLE BRAKE RIGHT (22 MM CLAMP) - GENERAL ASSEMBLY	25
TABLE OF CONTENTS	26

